




ASSEMBLY INSTRUCTIONS (ROOF RAIL)


Product Code: MR01001 (Crown)

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

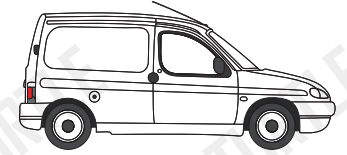

CTRN BRLNG VAN 02-07
PEU PRTRN VAN 96-07

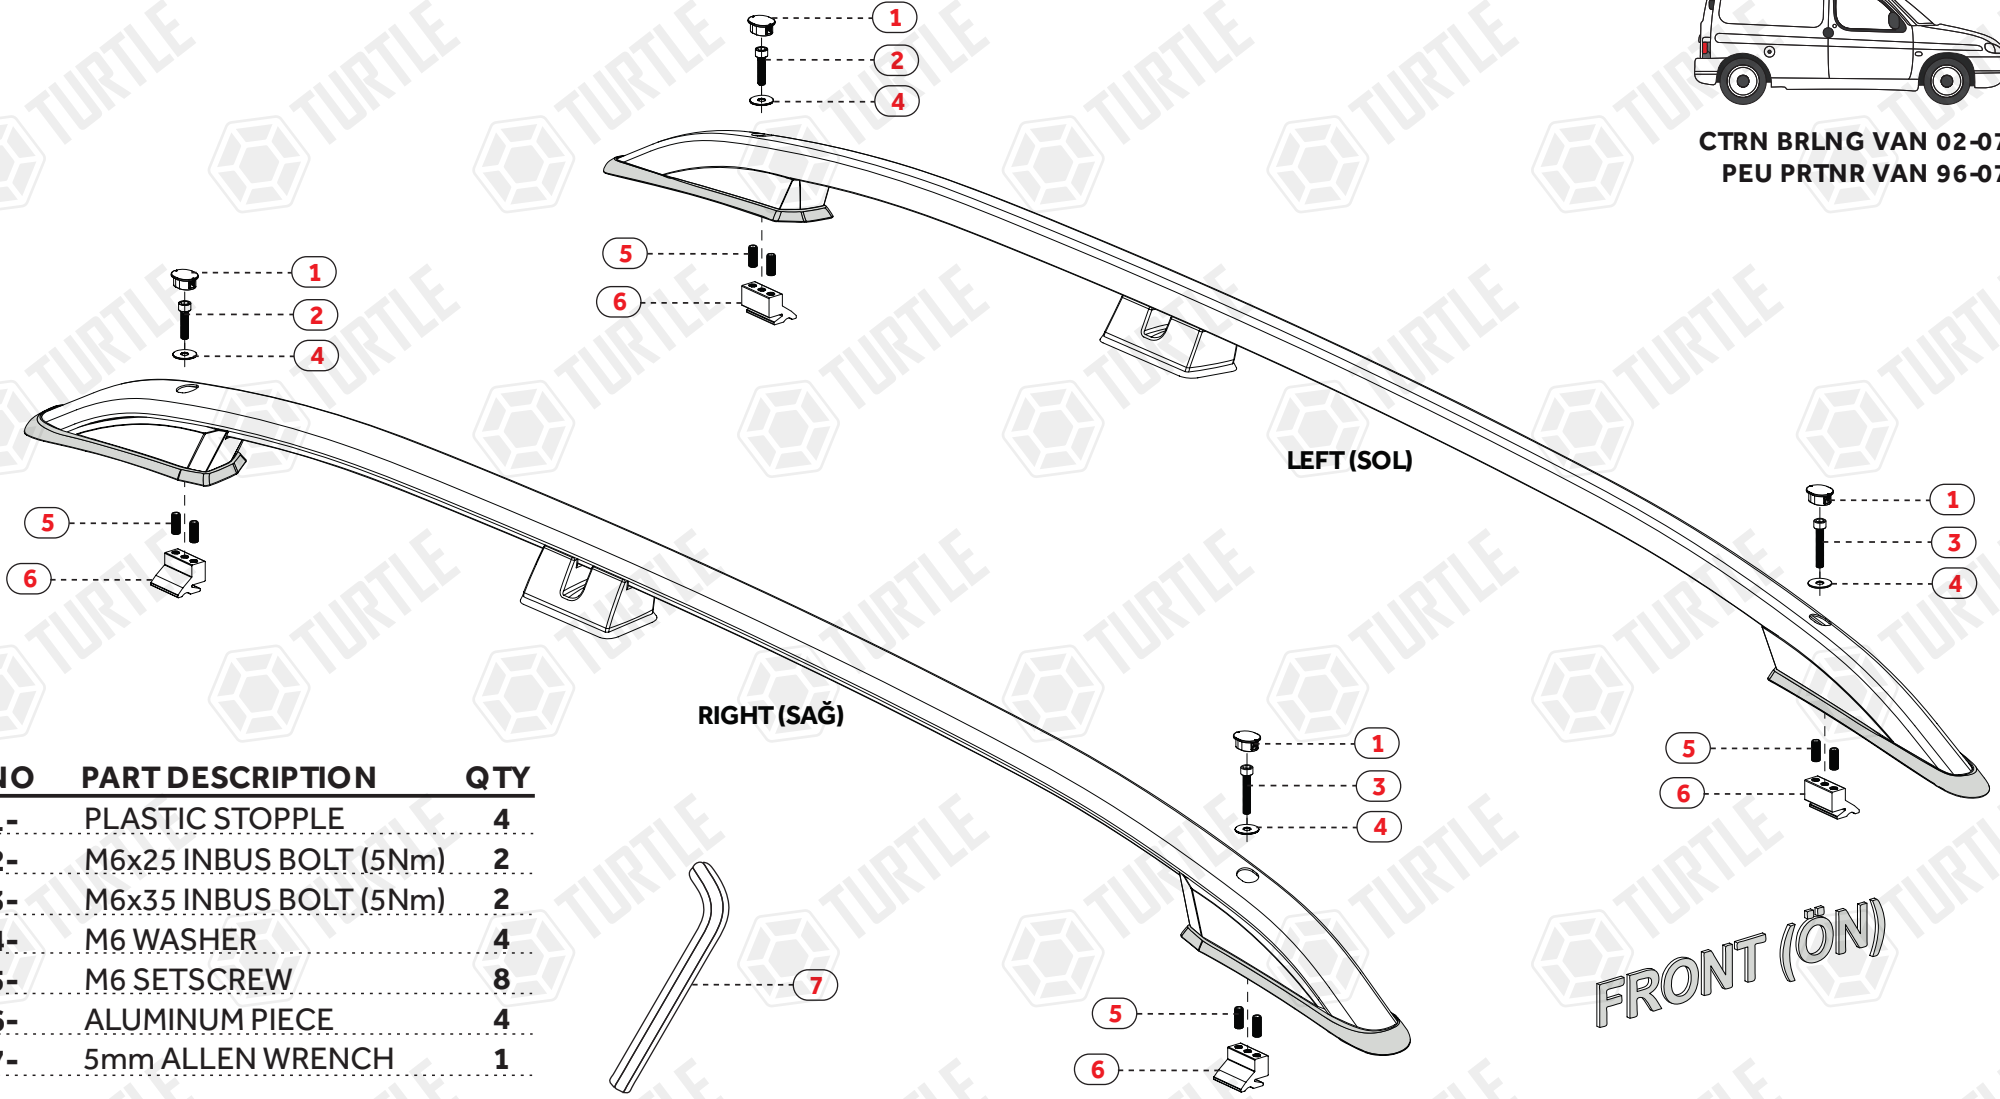

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	4
2-	M6x25 INBUS BOLT (5Nm)	2
3-	M6x35 INBUS BOLT (5Nm)	2
4-	M6 WASHER	4
5-	M6 SETSCREW	8
6-	ALUMINUM PIECE	4
7-	5mm ALLEN WRENCH	1