




ASSEMBLY INSTRUCTIONS (ROOF RAIL)


Product Code: MR01031 (Crown)

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

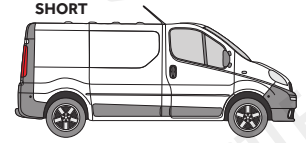

NSS PMSTR (X83) VAN 02-14
VXHL VVR (X83) VAN 01-14
REN TRFC (X83) VAN 01-14
OPL VVR (X83) VAN 01-14

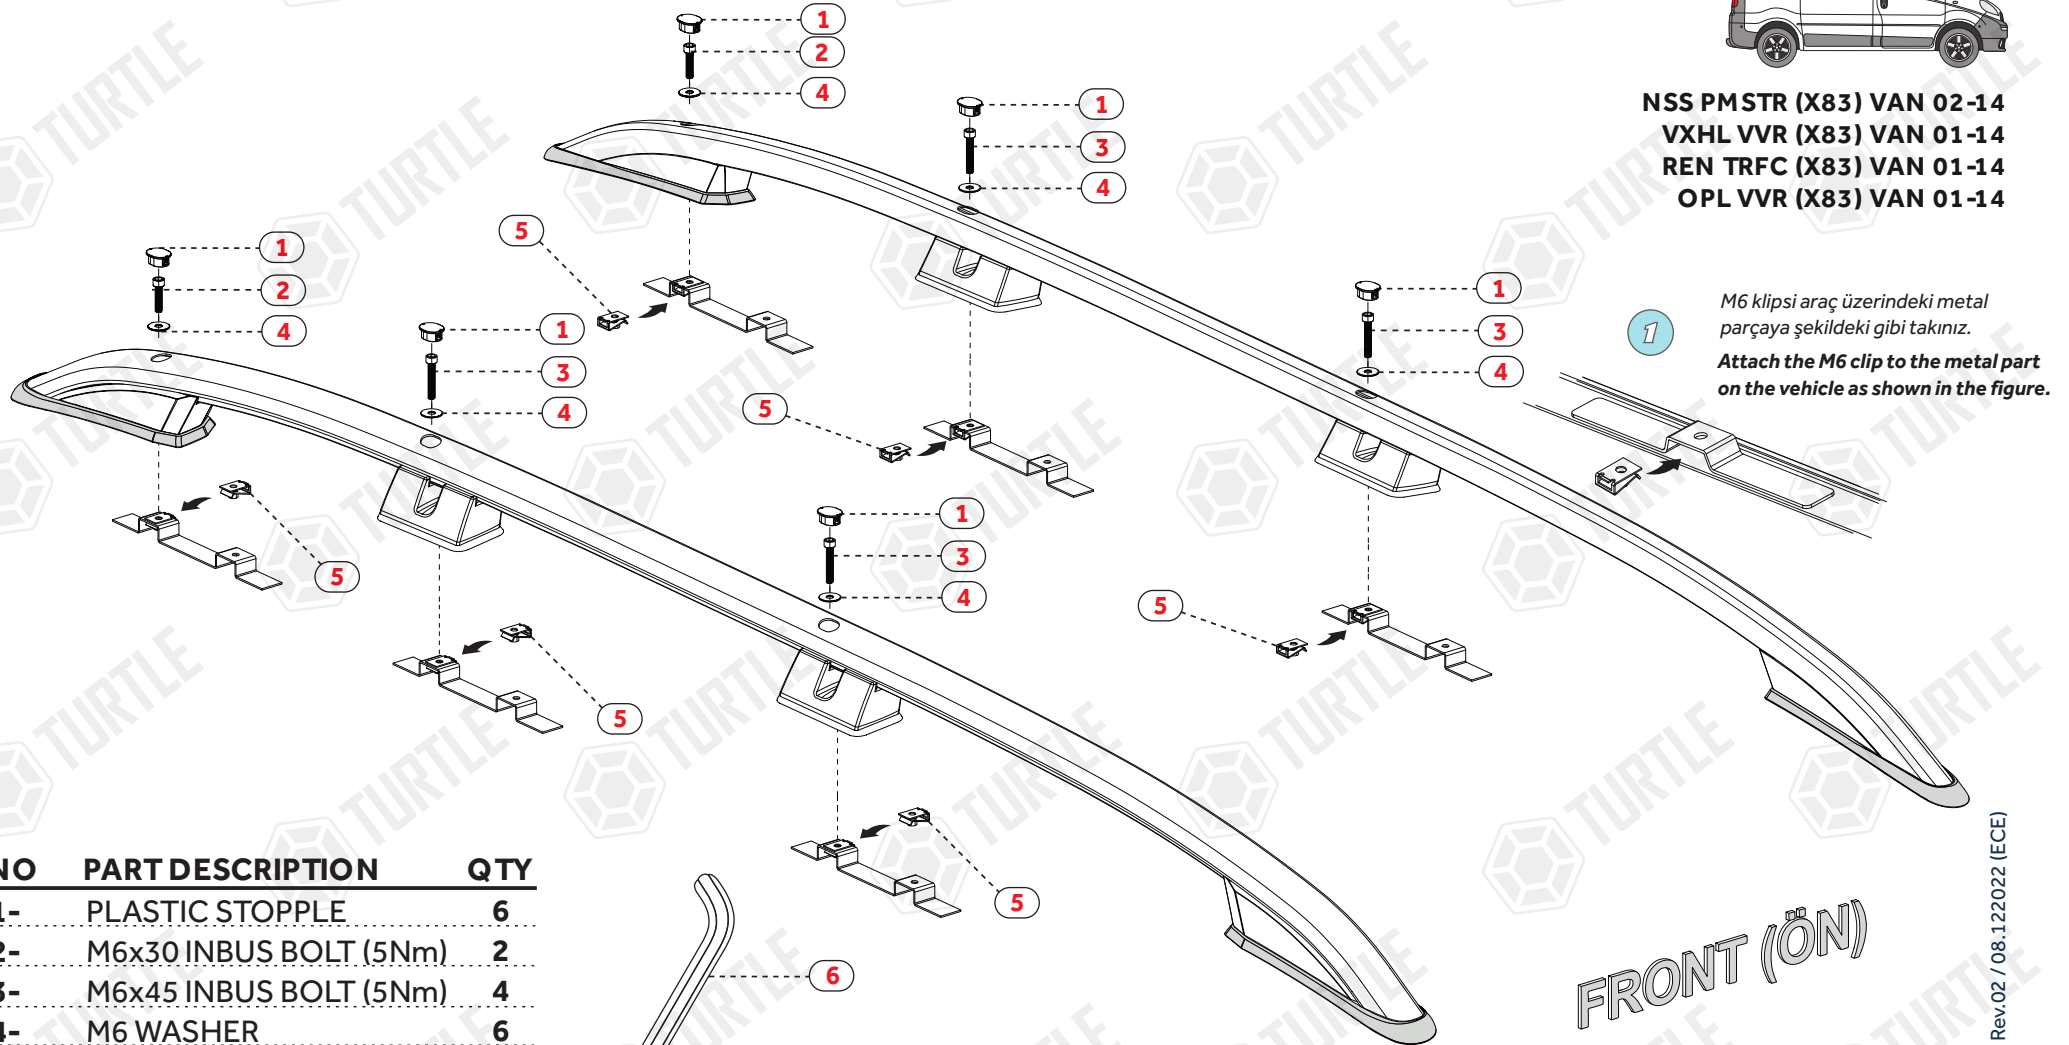

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	6
2-	M6x30 INBUS BOLT (5Nm)	2
3-	M6x45 INBUS BOLT (5Nm)	4
4-	M6 WASHER	6
5-	M6 SPEEDNUT	6
6-	5mm ALLEN WRENCH	1