




ASSEMBLY INSTRUCTIONS (ROOF RAIL)


Product Code: MR01048 (Crown)

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

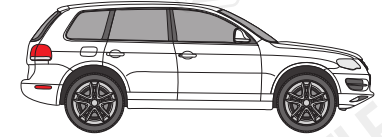

VWGN TORG (7L) SUV 02-10

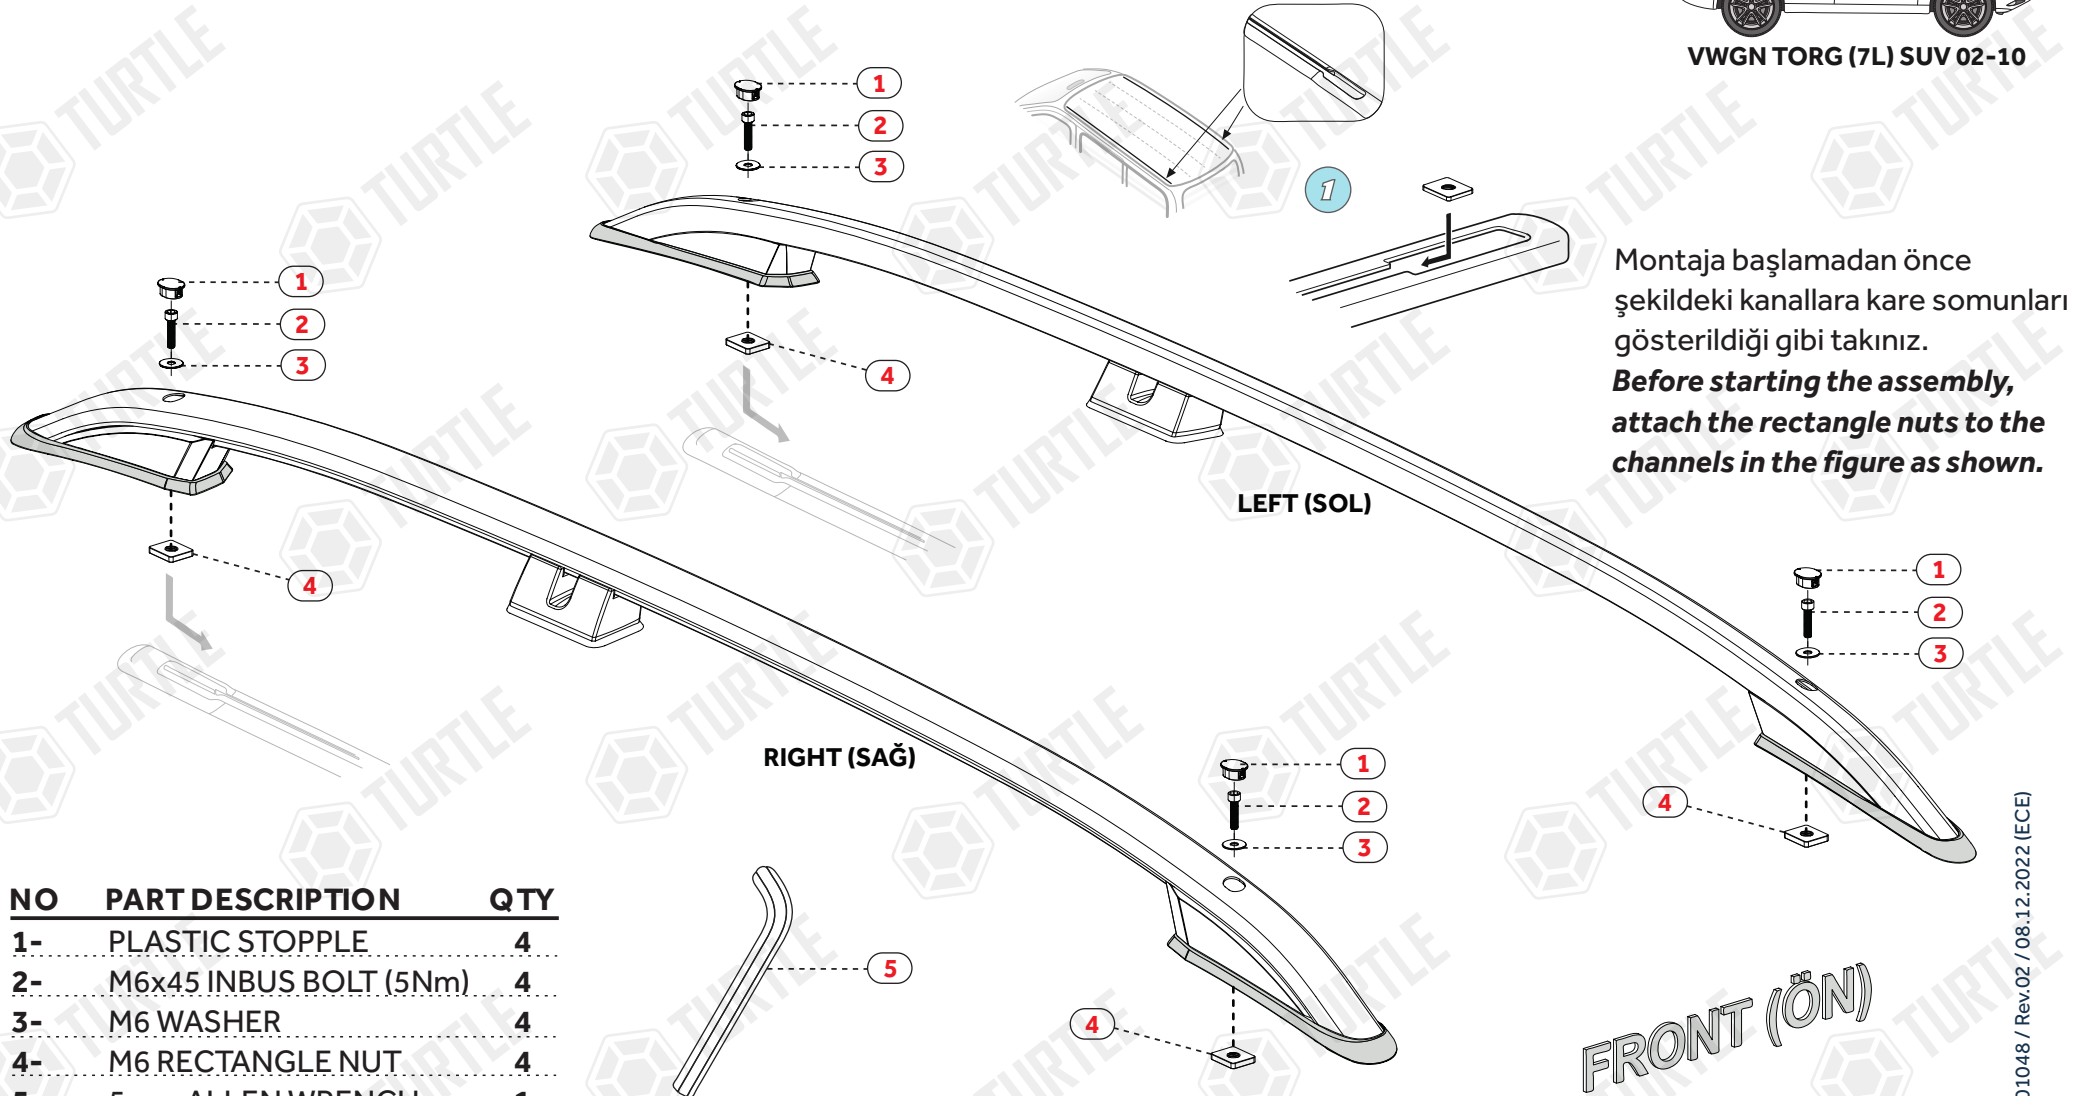

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	4
2-	M6x45 INBUS BOLT (5Nm)	4
3-	M6 WASHER	4
4-	M6 RECTANGLE NUT	4
5-	5mm ALLEN WRENCH	1