



FIRST TIME INSTALLATION


- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)




Product Code: MB01019(A-TYPE)
MB01019(A-TYPE)

COMPATIBLE VEHICLES

DAC DSTR 10-17
NSS TRRN 14-
REN DSTR 10-17

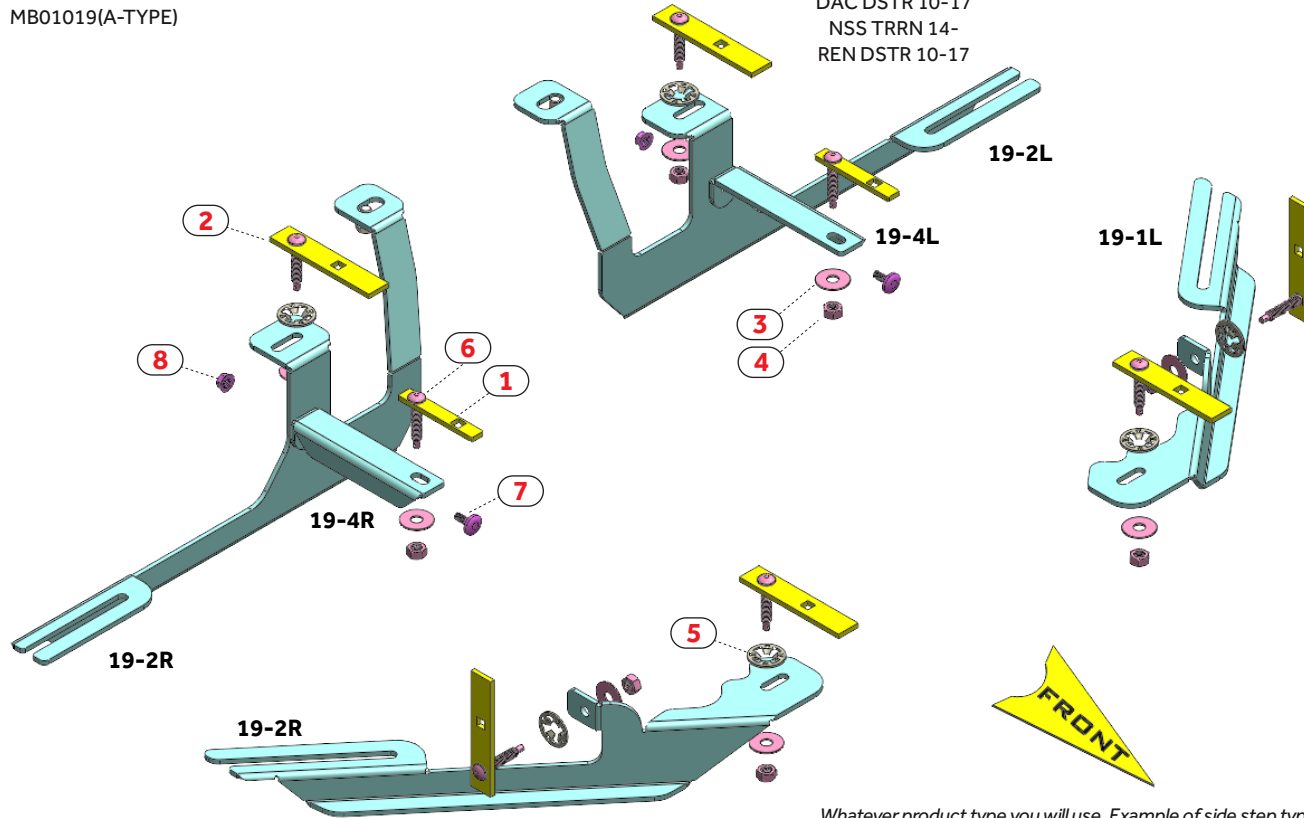

USE OF CN-... PARTS

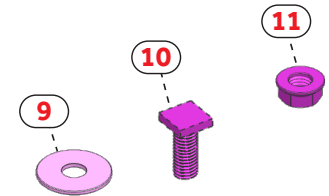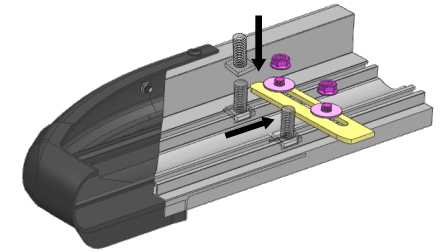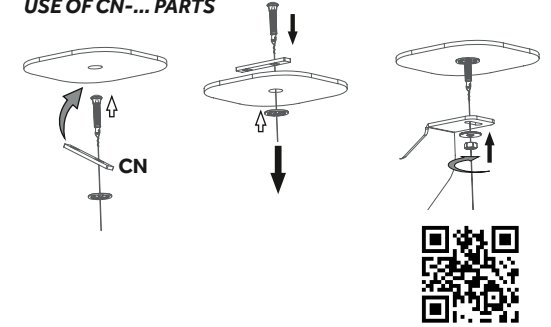

PACKAGE INCLUDED

1- CN-01 M8	2
2- CN-03 M8	6
3- D8 WASHER	8
4- M8 HEX NUT	8
5- CLAMPING PIECE	8
6- M8 SPECIAL BOLT	8
7- M6x15 LOCK HEADED BOLT	2
8- M6 HEX FLANGE NUT	2
9- D8 WASHER	8
10- M8x20 SQUARE BOLT	8
11- M8 FLANGE NUT	8

ZIPLOCK BAG

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisiyse, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



MB01019/MB02019/ Rev.00/ 28.12.23 (AYŞENUİR)