



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)



Product Code: MB01089 (A-TYPE)

MB02089 (B-TYPE)

COMPATIBLE VEHICLES

NSS PFNDR (R52) SUV 13-20

USE OF CN-... PARTS

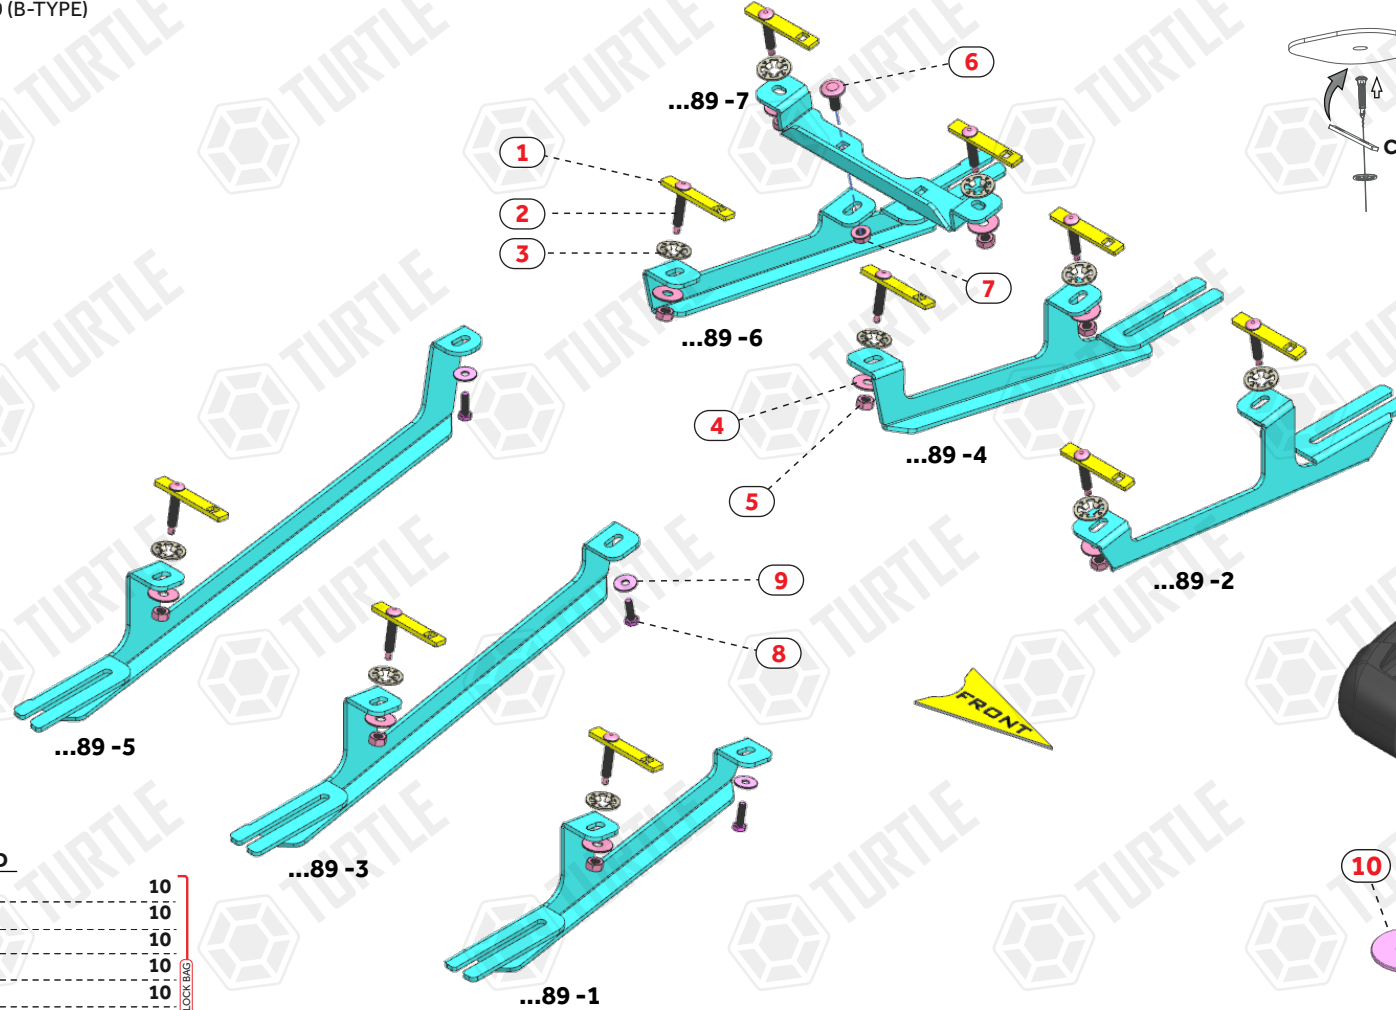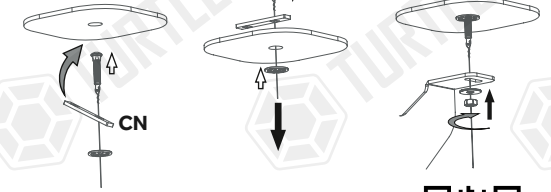

PACKAGE INCLUDED

1- CN-01	10
2- M8 SPECIAL BOLT	10
3- CLAMPING PIECE	10
4- D8 WASHER	10
5- M8 HEX NUT	10
6- M8x20 SQUARE NECK BOLT	1
7- M8 HEX FLANGE NUT	1
8- M6x20 HEX BOLT	3
9- D6 WASHER	3
10- D8 WASHER	12
11- M8x20 SQUARE BOLT	12
12- M8 FLANGE NUT	12

ZIP LOCK BAG