



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION




ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01118 (A-TYPE)
MB02118 (B-TYPE)

COMPATIBLE VEHICLES

TYT RV4 (XA30) 06-12
TYT RV4 (XA40) 13-18

USE OF CN-... PARTS

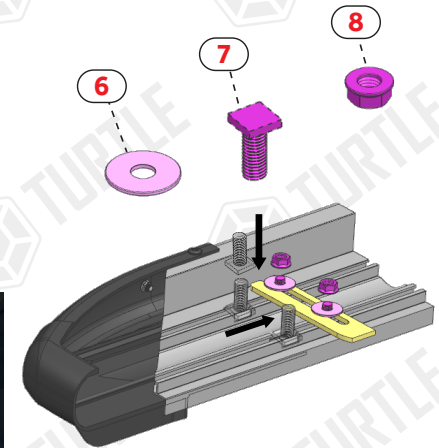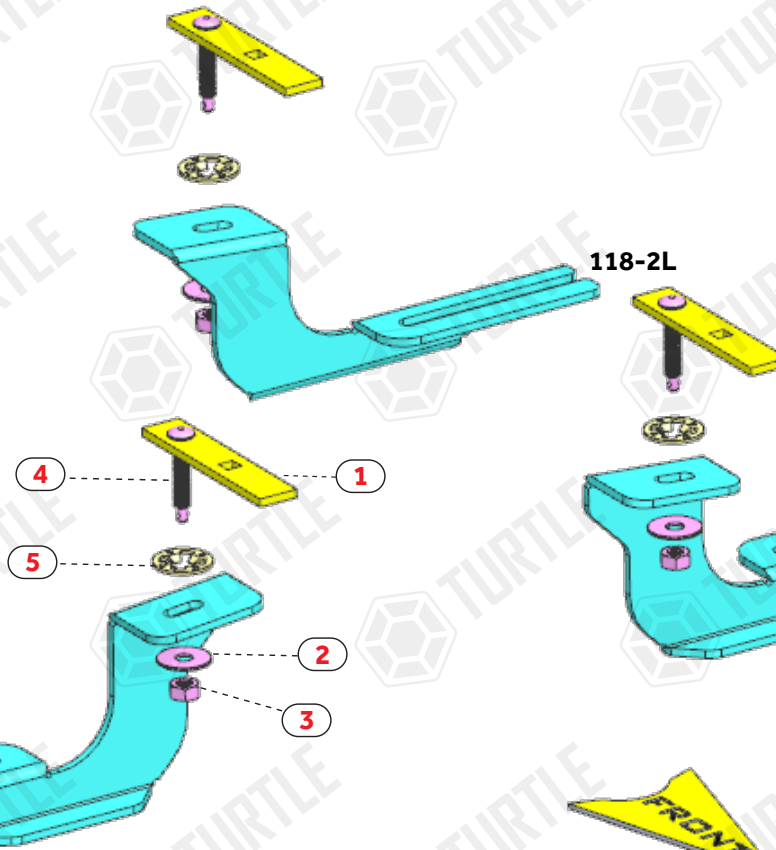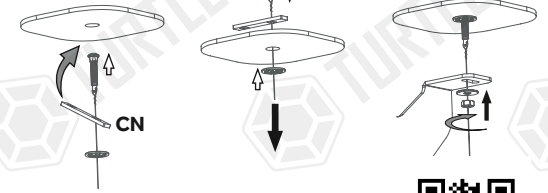

PACKAGE INCLUDED

1- CN-03 M8	4
2- D8 WASHER	4
3- M8 HEX NUT	4
4- M8 SPECIAL BOLT	4
5- D8 CLAMPING PIECE	4
6- D8 WASHER	8
7- M8x20 SQUARE BOLT	8
8- M8 FLANGE NUT	8

ZIPLOCK BAG

