



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)


Product Code: MB01167 (A TYPE)

MB02167(B TYPE)


COMPATIBLE VEHICLES

TYT C-HR (AX10/AX50) 17- 5dr SUV


USE OF CN-... PARTS

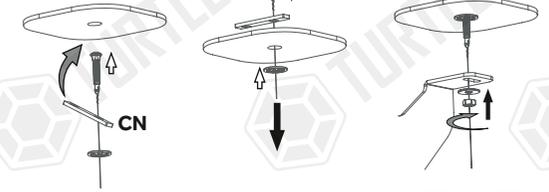


167-2 R

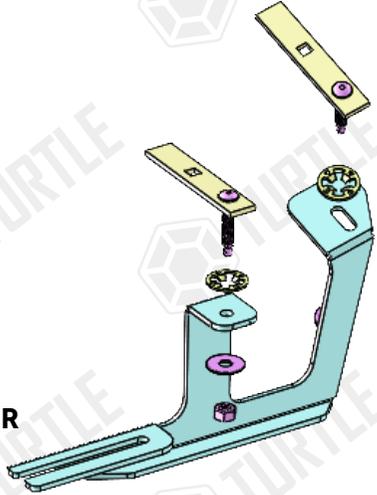

167-2 L

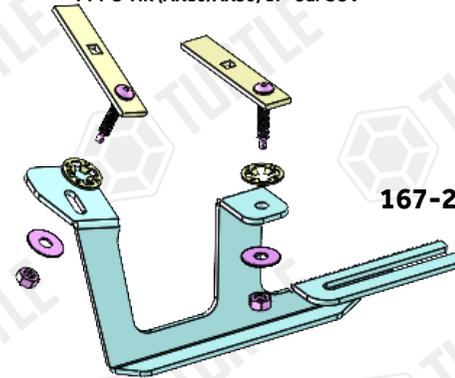

167-1 R

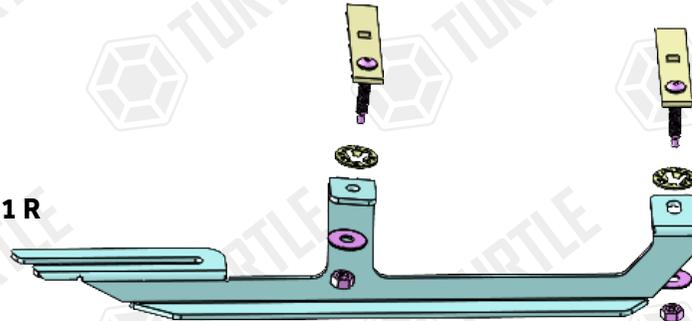

1


167-1 L

2

3

4

5

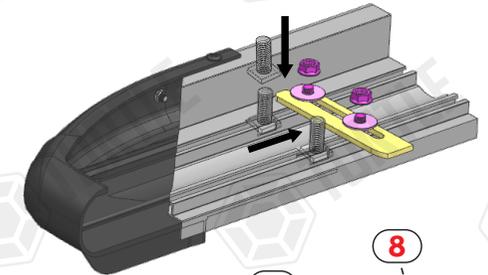

6

7

8

PACKAGE INCLUDED

1- CN- 03 M8	8	ZIPLOCK BAG
2- M8 SPECIAL BOLT	8	
3- CLAMPING PIECE	8	
4- D8 WASHER	8	
5- M8 HEX NUT	8	
6- D8 WASHER	8	
7- M8x20 SQUARE BOLT	8	
8- M8 FLANGE NUT	8	