



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01127(A/B/O-TYPE)



MB02127

MB03127


COMPATIBLE VEHICLES

- VWGN CARVL (T5/T6) 03-
- VWGN MVAN (T5/T6) 03-
- VWGN SHTTL (T5/T6) 03-
- VWGN TRNSPRT (T5/T6) 03-


USE OF CN-... PARTS

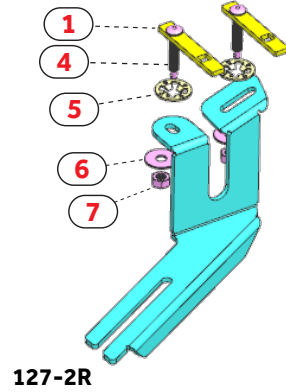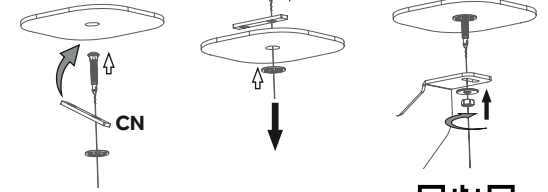


127-2R

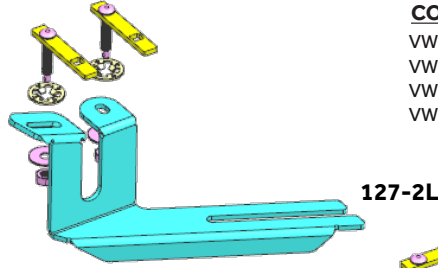


127-2L

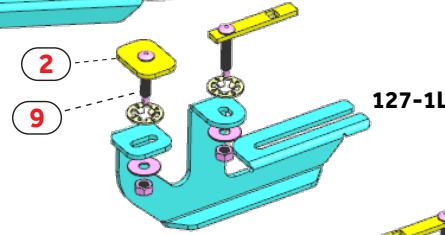


127-1L

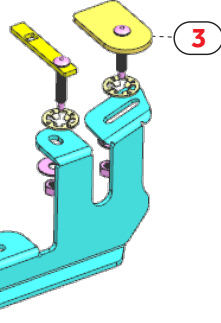

127-3R

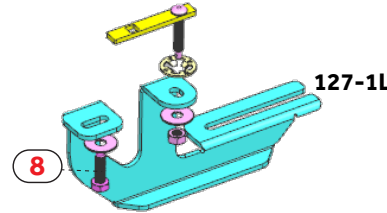

127-1L

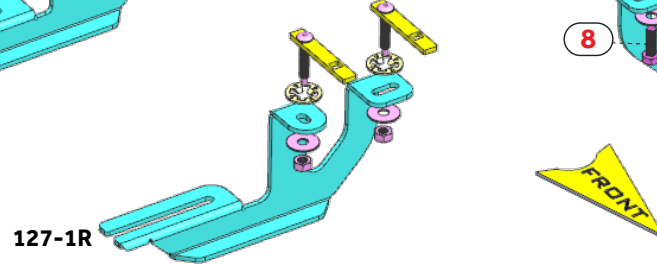

127-1R

PACKAGE INCLUDED

1- CN-01 M8	9
2- CN-05 M8	1
3- CN-09 M8	1
4- M8 SPECIAL BOLT	9
5- CLAMPING PIECE	11
6- D8 WASHER	12
7- M8 HEX NUT	11
8- M8x25 HEX BOLT	1
9- M8x30 LOCK HEADED BOLT	2
10- D8 WASHER	12
11- M8x20 SQUARE BOLT	12
12- M8 FLANGE NUT	12

ZIPLOCK BAG


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

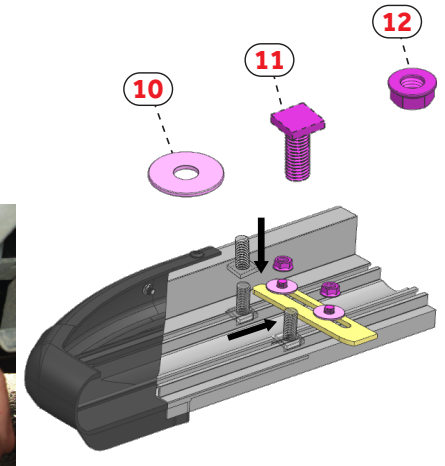

MB01127-MB02127-MB04127/ Rev.00/24.11.2023 (ÖMER)