



FIRST TIME INSTALLATION


- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)



Product Code: MB01150 (A TYPE)
MB02150(B TYPE)

COMPATIBLE VEHICLES

RENAULT CAPTUR (JB/JE) SUV 20-

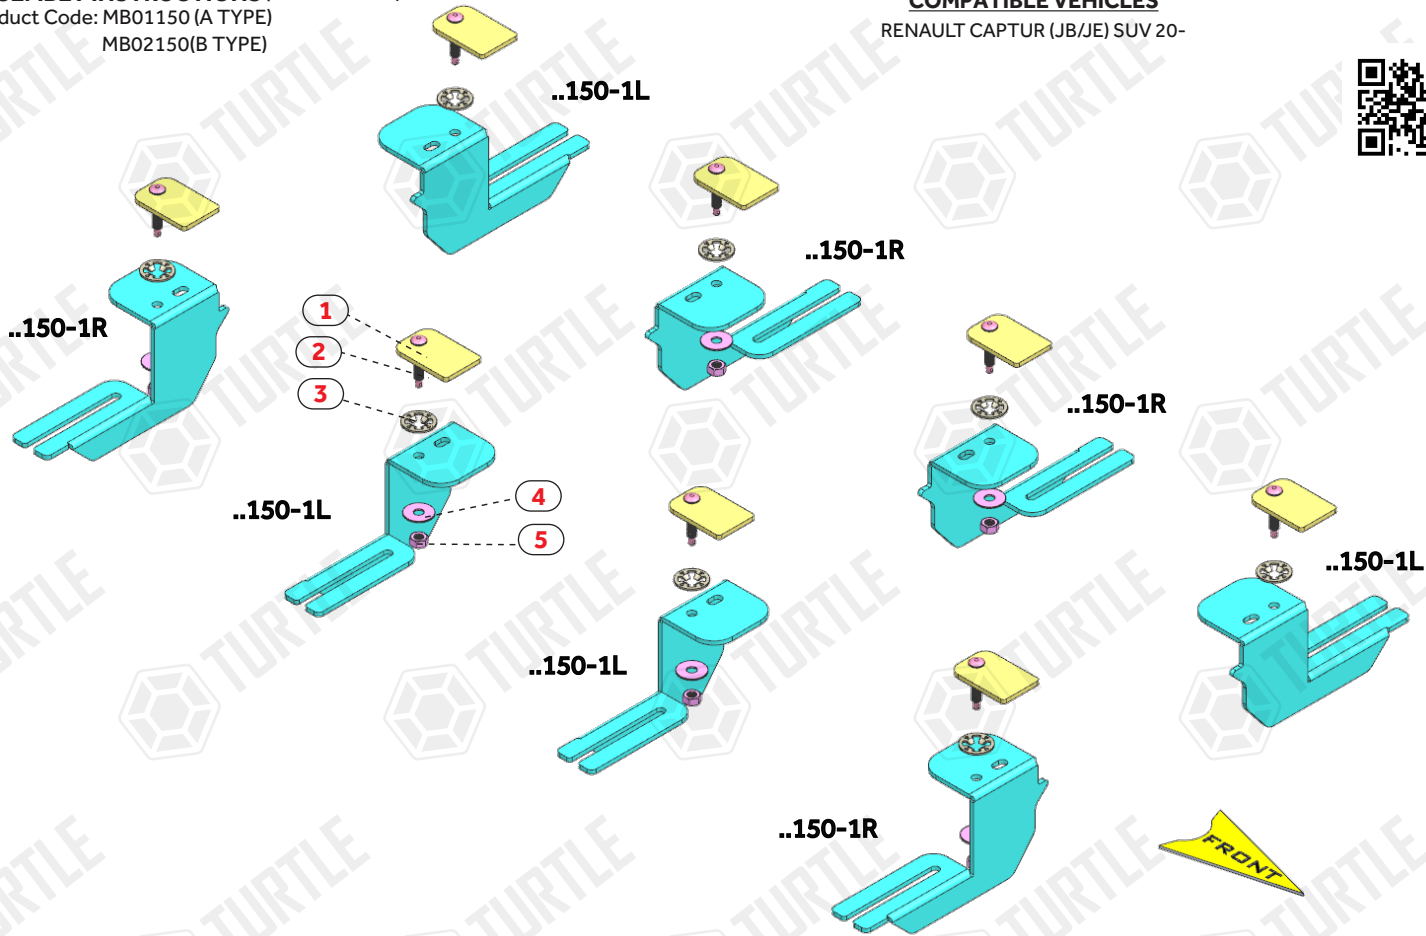

USE OF CN-... PARTS

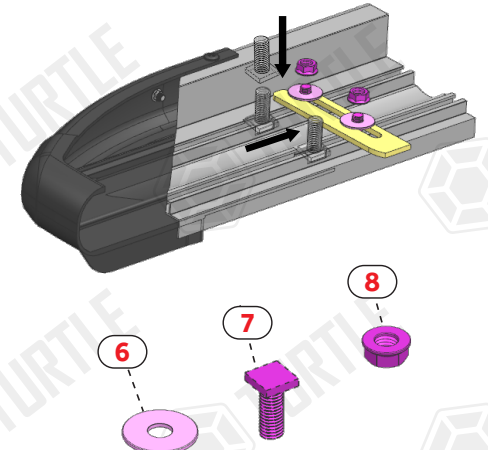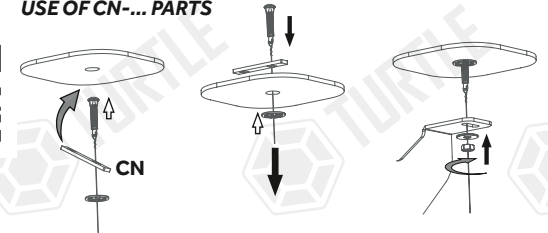

PACKAGE INCLUDED

1- CN-012 M8	8	ZIPLOCK BAG
2- M8 SPECIAL BOLT	8	
3- CLAMPING PIECE	8	
4- D8 WASHER	8	
5- M8 HEX NUT	8	
6- D8 WASHER	16	
7- M8x20 SQUARE BOLT	16	
8- M8 FLANGENUT	16	

