



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB03081 (E-TYPE)

COMPATIBLE VEHICLES

- MBNZ METRS (W447) VAN 15-
- MBNZ TOUR (W447) MPV 15-
- MBNZ VCLS (W447) MPV 15-
- MBNZ VIAN (W447) MPV 15-
- MBNZ VIAN (W639) MPV 03-14
- MBNZ VIT (W447) VAN 15-
- MBNZ VIT (W639) VAN 03-14

USE OF CN-... PARTS

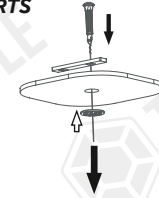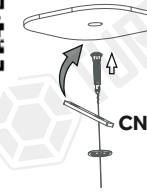

For Single Door

81-3

81-6

81-2L

1

81-1L



Aracınız tek kapılı ise; sol orta bağlantıları bu şekilde uygulayınız. If your vehicle has a single door; apply left middle connetions like this.

7

2

81-6

81-2R

6


4

3

81-1R

5

81-1R

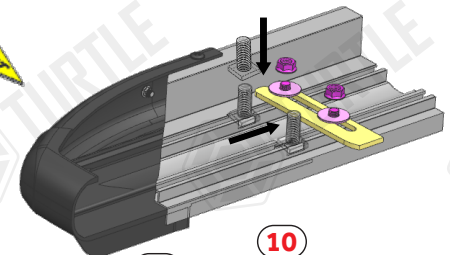


9

10

PACKAGE INCLUDED

| | |
|-------------------------|----|
| 1- CN-03 M8 | 6 |
| 2- CN-05 M8 | 2 |
| 3- D8 WASHER | 8 |
| 4- M8 HEX NUT | 8 |
| 5- CLAMPING PIECE | 8 |
| 6- M8 SPECIAL BOLT | 6 |
| 7- M8x30 LOCK HEAD BOLT | 2 |
| 8- D8 WASHER | 16 |
| 9- M8x20 SQUARE BOLT | 16 |
| 10- M8 FLANGE NUT | 16 |

ZIPLOCK BAG

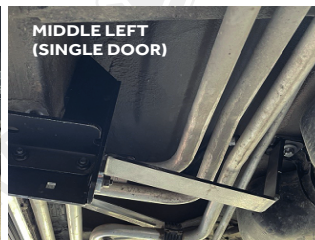

MB02081 / Rev.00/ 19.12.2023 (ÖMER)