



FIRST TIME INSTALLATION


- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)


Product Code: MB01133 (A-TYPE)
MB02133 (B-TYPE)
MB03133 (E-TYPE)

COMPATIBLE VEHICLES

CTRN SPC TOUR (Mk3) 17-
TYT PACE VERS (Mk3) 17-
OPL ZFR LIFE (Mk3) 19-
CTRN DSPTC (Mk3) 17-
PEU XPRT (Mk3) 17-
PEU TRVL (Mk3) 17-
TYT PACE (Mk3) 17-

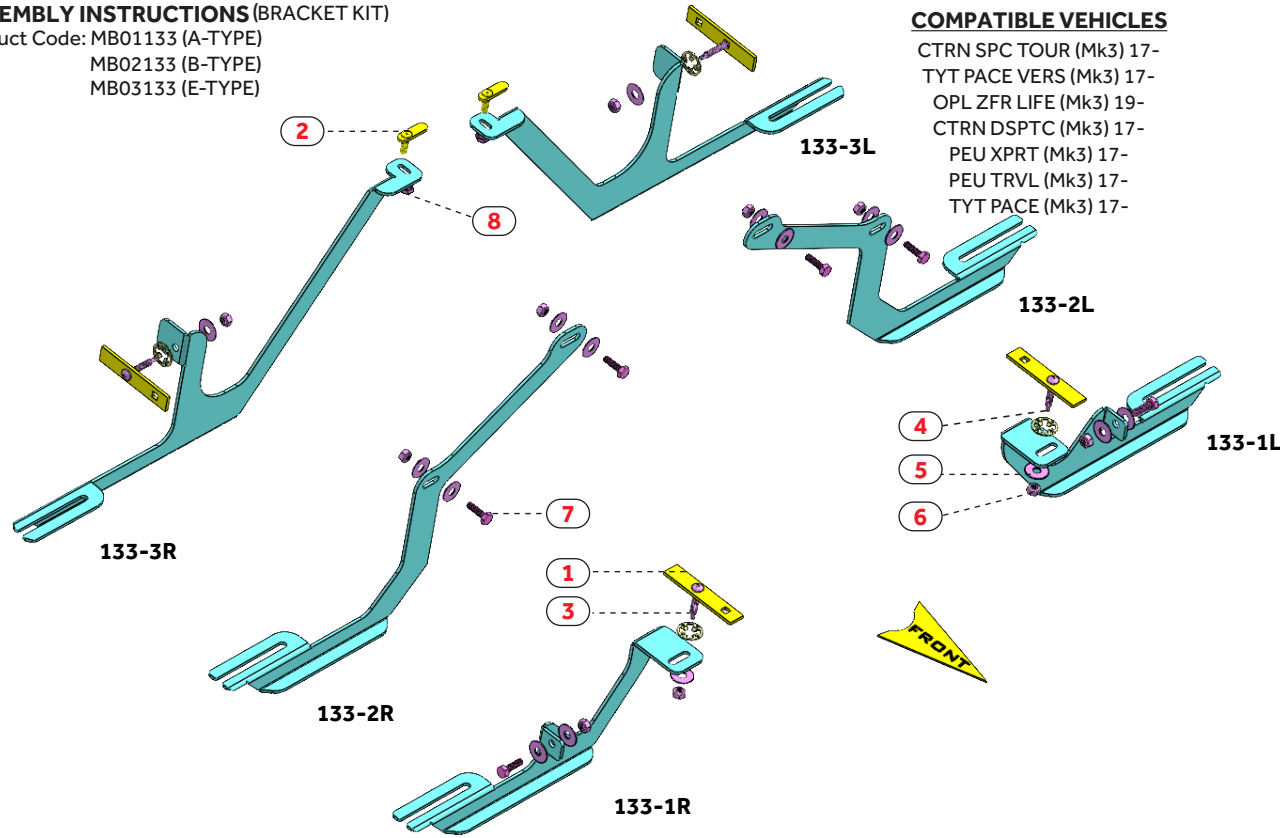

USE OF CN-... PARTS

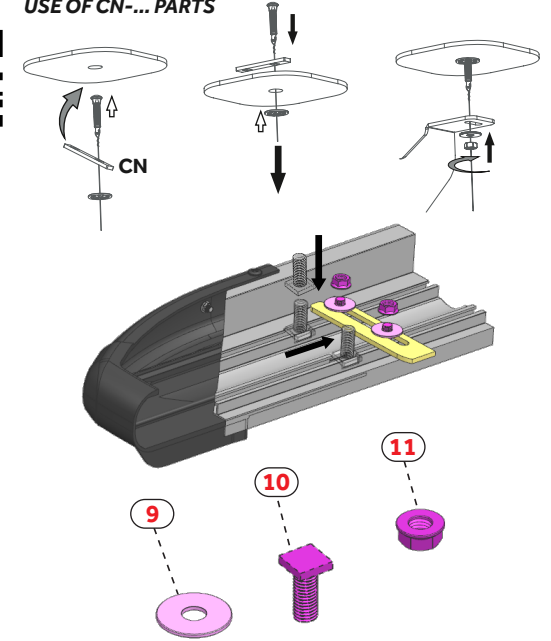

PACKAGE INCLUDED

1- CN-03 M8	4	ZIPLOCK BAG	
2- CN-08 M6	2		
3- M8 SPECIAL BOLT	4		
4- CLAMPING PIECE	6		
5- D8 WASHER	16		
6- M8 HEX NUT	10		
7- M8x25 HEX BOLT	6		
8- M6 HEX FLANGE NUT	2		
9- D8 WASHER	12		ZIPLOCK BAG
10- M8x20 SQUARE BOLT	12		
11- M8 FLANGE NUT	12		

