



### FIRST TIME INSTALLATION


- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

### ASSEMBLY INSTRUCTIONS (BRACKET KIT)



Product Code: MB05014(A/B TYPE)

### COMPATIBLE VEHICLES

CHVR TRX SUV 13-  
OPL MKK SUV 13-  
VXHL MKK SUV 13-

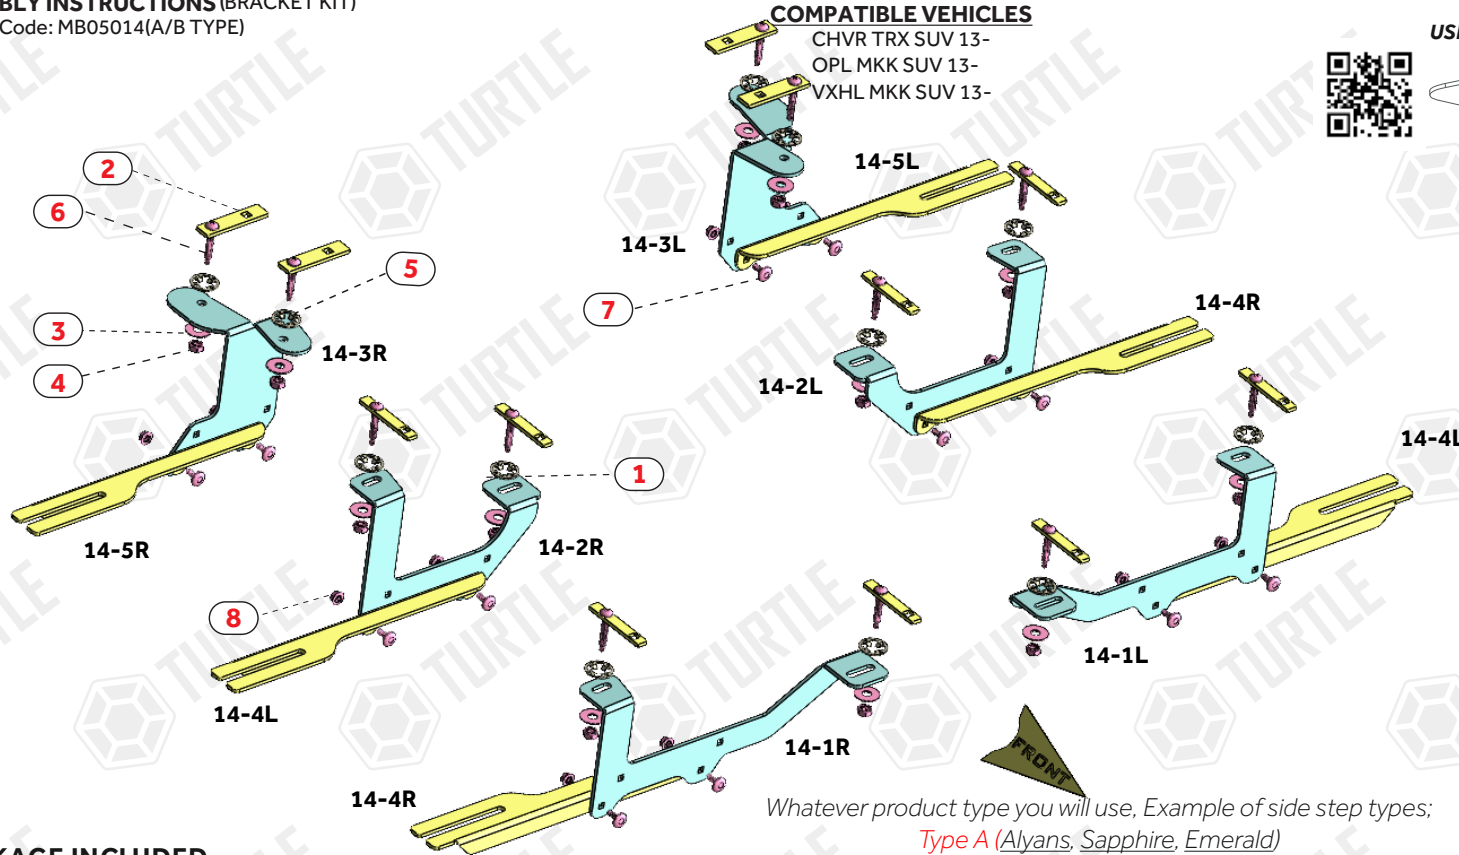

### USE OF CN-... PARTS

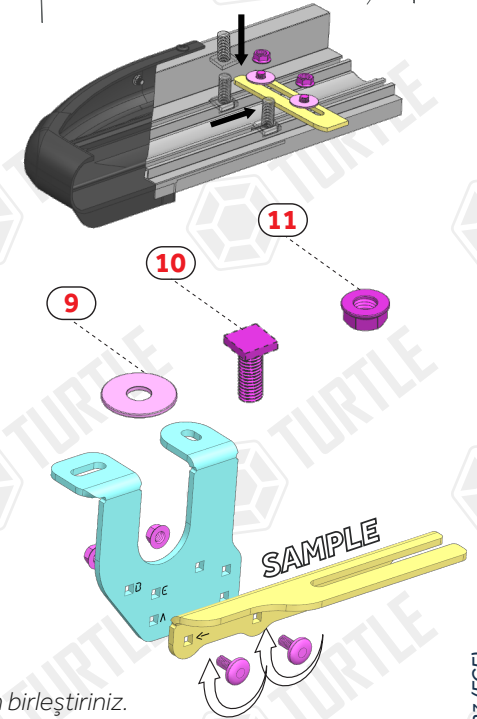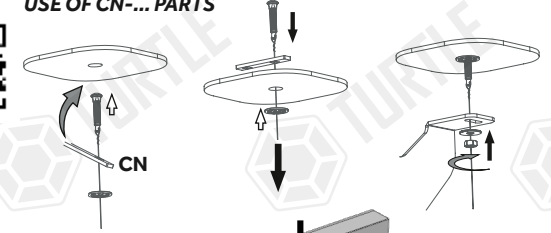

### PACKAGE INCLUDED

1- CN-01 M8	8
2- CN-02 M8	4
3- D8 WASHER	12
4- M8 HEX NUT	12
5- CLAMPING PIECE	12
6- M8 SPECIAL BOLT	12
7- M6x15 LOCK HEADED BOLT	12
8- M6 HEX FLANGE NUT	12
9- D8 WASHER	12
10- M8x20 SQUARE BOLT	12
11- M8 FLANGE NUT	12

Whatever product type you will use, Example of side step types:

*Type A (Alyans, Sapphire, Emerald)*

*Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)*

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

