



### FIRST TIME INSTALLATION

- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

### ASSEMBLY INSTRUCTIONS (BRACKET KIT)




Product Code: MB05056 (A/B-TYPE)

\*- Car's own bolts.  
Aracın kendi civatası.

### COMPATIBLE VEHICLES

JP CHRK (KL) SUV 14-

### USE OF CN-... PARTS

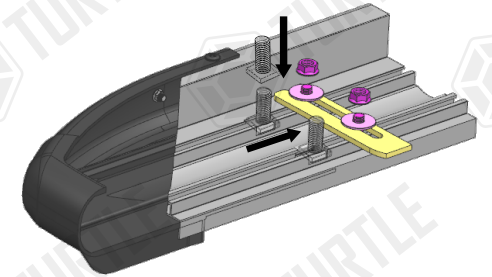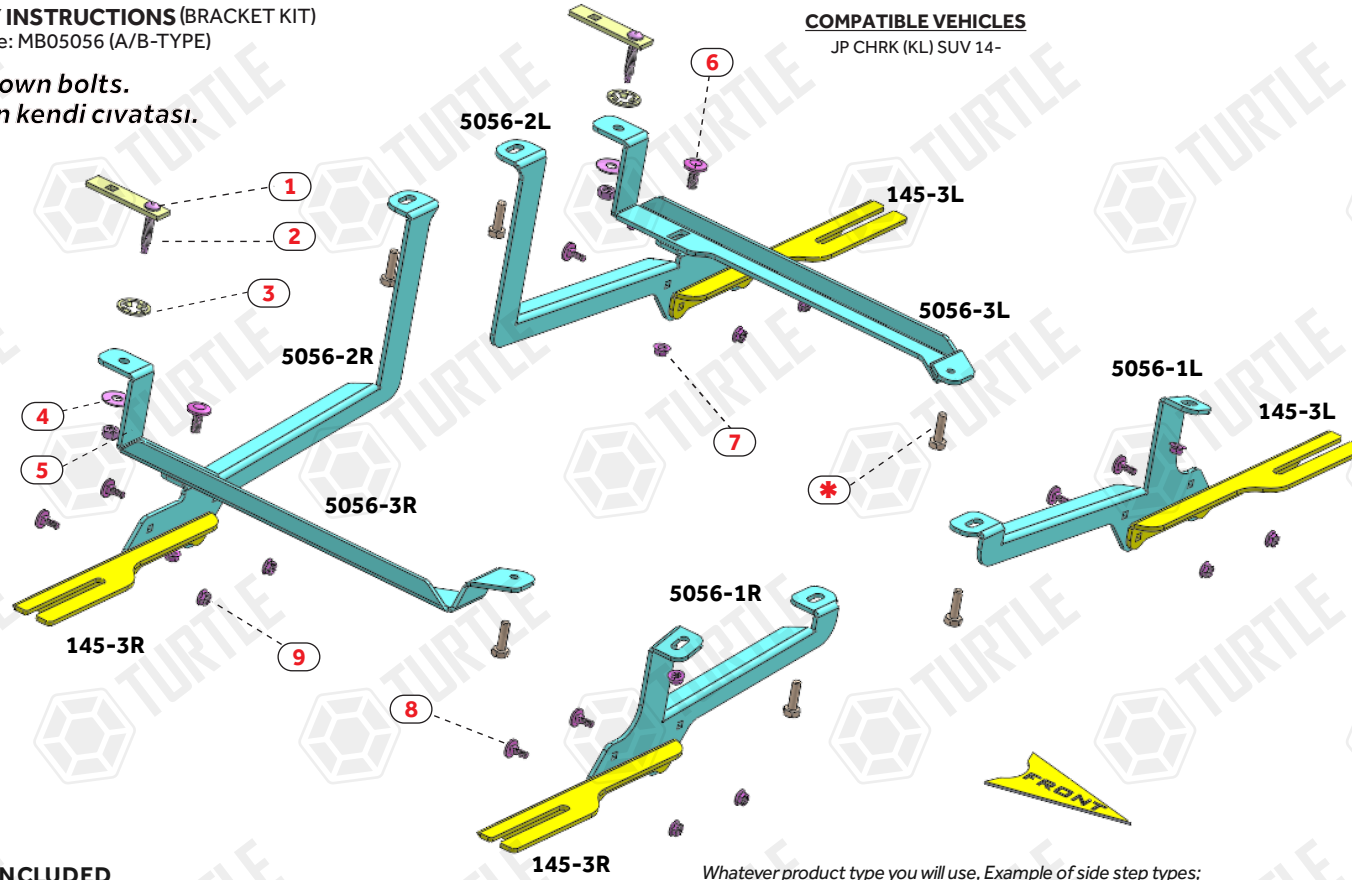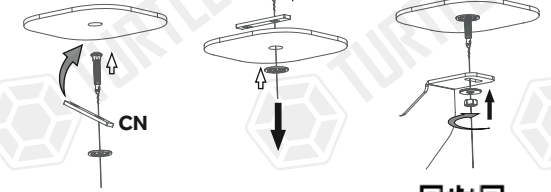


### PACKAGE INCLUDED

1- CN-02	2
2- M8 SPECIAL BOLT	2
3- CLAMPING PIECE	2
4- D8 WASHER	2
5- M8 HEX NUT	2
6- M8x20 LOCK HEADED BOLT	2
7- M8 HEX FLANGE NUT	2
8- M6x15 LOCK HEADED BOLT	8
9- M6 HEX FLANGE NUT	10
10- D8 WASHER	8
11- M8x20 SQUARE BOLT	8
12- M8 FLANGE NUT	8

ZIPLOCK BAG

Whatever product type you will use, Example of side step types;  
 Type A (Alyans, Sapphire, Emerald)  
 Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)  
 Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

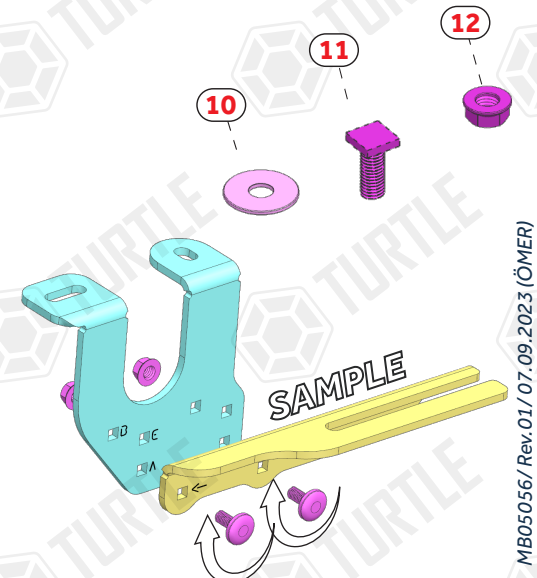

MB05056/ Rev.01/ 07.09.2023 (ÖMER)