



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)


Product Code: MB05065 (A/B-TYPE)

COMPATIBLE VEHICLES

- KI SOUL (AM) HATCHBACK 09-13
- KI SOUL (PS) HATCHBACK 14-19
- KI SOUL (SK3) HATCHBACK 20-



USE OF CN-... PARTS

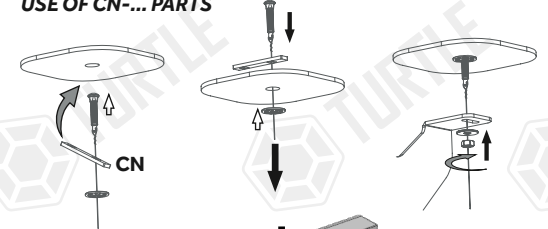

Whatever product type you will use. Example of side step types:

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.


Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

PACKAGE INCLUDED

1- CN-01 M8	8
2- D8 WASHER	8
3- M8 HEX NUT	8
4- CLAMPING PIECE	8
5- M8 SPECIAL BOLT	8
6- M6x15 LOCK HEADED BOLT	8
7- M6 HEX FLANGE NUT	8
8- D8 WASHER	8
9- M8x20 SQUARE BOLT	8
10- M8 FLANGE NUT	8

ZIPLOCK BAG


ZIPLOCK BAG

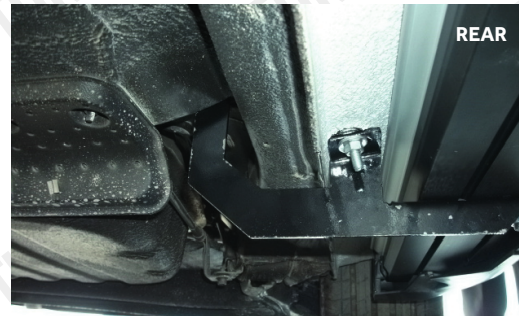

REAR



FRONT

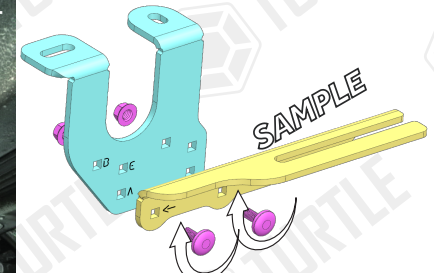

SAMPLE