



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)








Product Code: MB05076 (A/B-TYPE)

COMPATIBLE VEHICLES

MZD CX5 (KE) SUV 12-17



USE OF CN-... PARTS

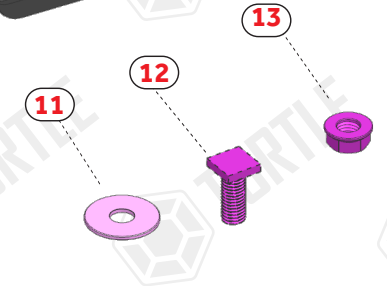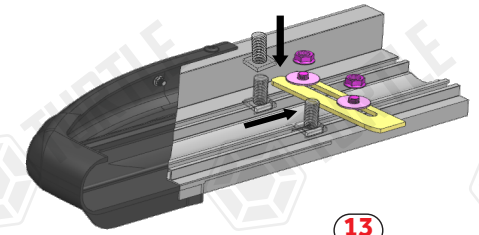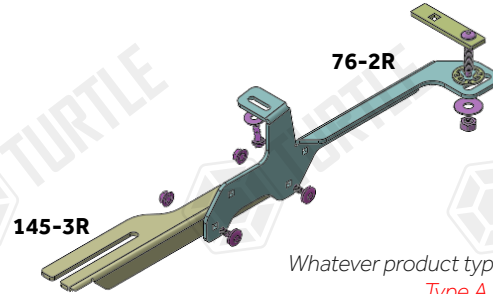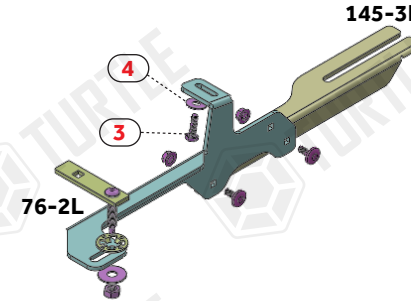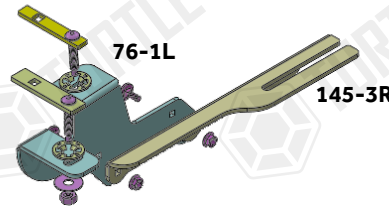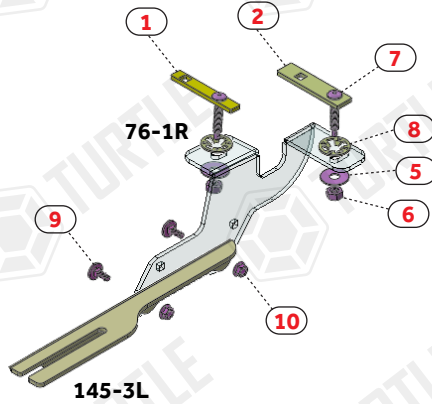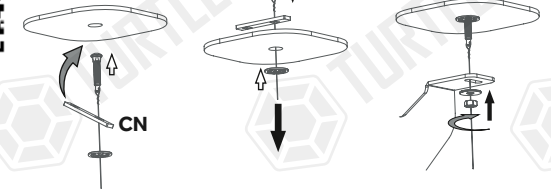

PACKAGE INCLUDED

1- CN-01 M8	2
2- CN-02 M8	4
3- M6x20 HEX BOLT	2
4- D6 WASHER	2
5- D8 WASHER	6
6- M8 HEX NUT	6
7- M8 SPECIAL BOLT	6
8- CLAMPING PIECE	6
9- M6x15 LOCK HEADED BOLT	8
10- M6 HEX FLANGE NUT	8
11- D8 WASHER	8
12- M8x20 SQUARE BOLT	8
13- M8 FLANGE NUT	8

ZIPLOCK BAG

Whatever product type you will use, Example of side step types:

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

