



### FIRST TIME INSTALLATION

- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

### ASSEMBLY INSTRUCTIONS (BRACKET KIT)



Product Code: MB05079 (A/B-TYPE)

### COMPATIBLE VEHICLES

MBNZ M (ML-W164) SUV 06-11



### USE OF CN-... PARTS

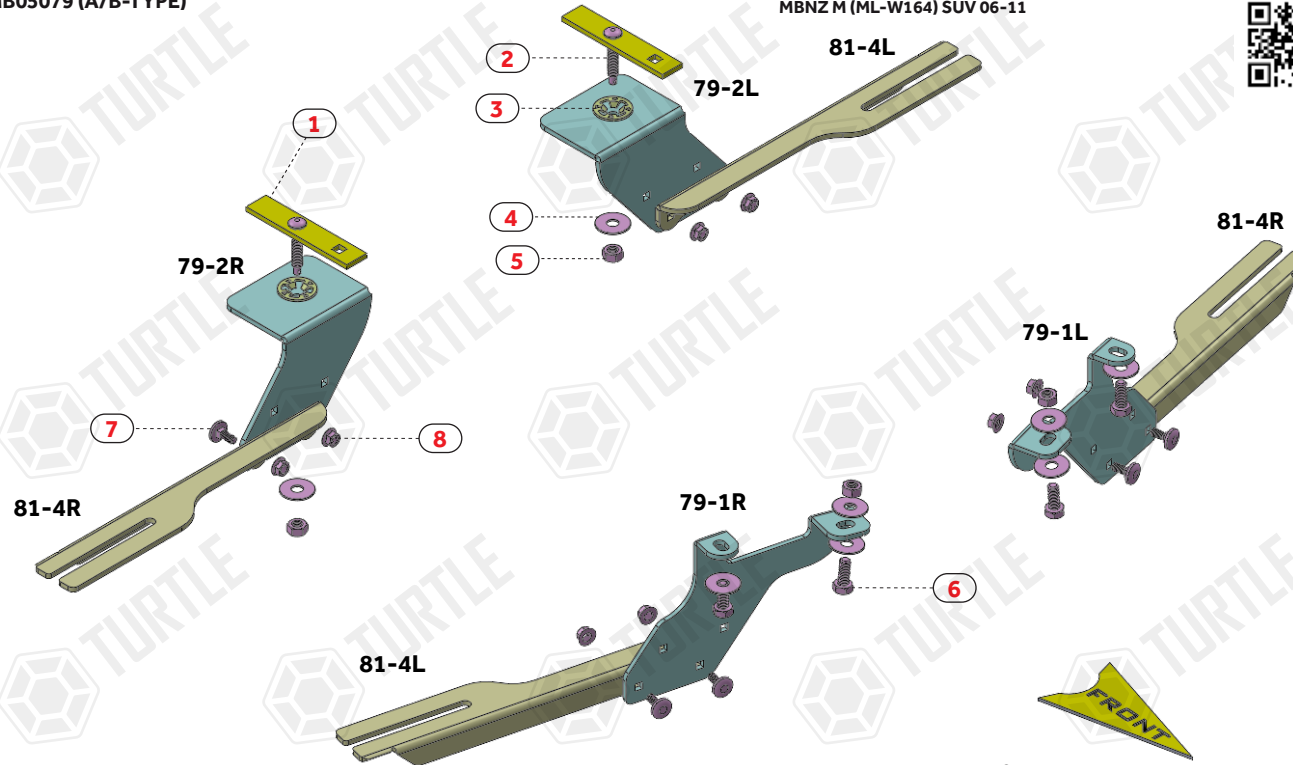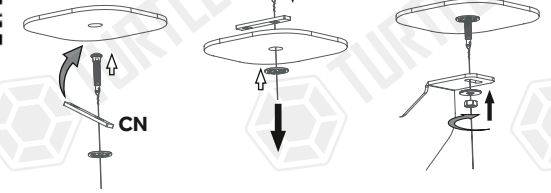



Whatever product type you will use, Example of side step types;

**Type A** (Alyans, Sapphire, Emerald)

**Type B** (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

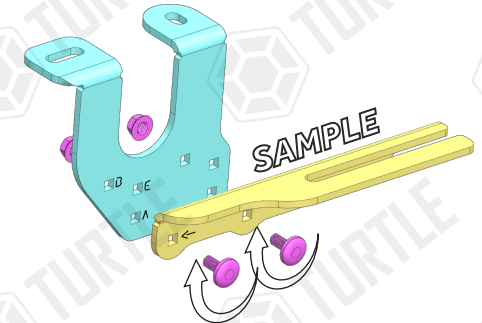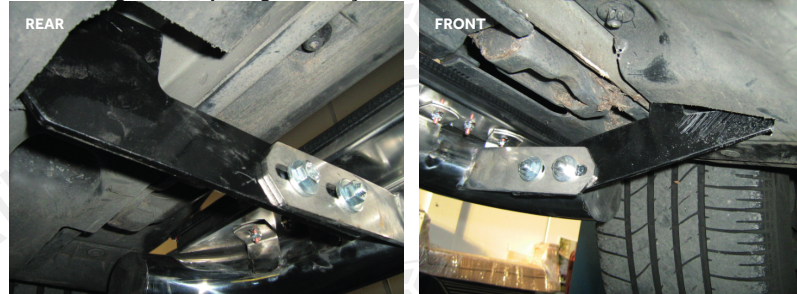

### PACKAGE INCLUDED

1- CN-03 M8	2	ZIPLOCK BAG
2- M8 SPECIAL BOLT	2	
3- CLAMPING PIECE	2	
4- D8 WASHER	8	
5- M8 HEX NUT	4	
6- M8x25 HEX BOLT	4	
7- M6x15 LOCK HEADED BOLT	8	
8- M6 HEX FLANGE NUT	8	
9- D8 WASHER	8	
10- M8x20 SQUARE BOLT	8	
11- M8 FLANGE NUT	8	

CAN OTOMOTIV İNŞ. İTH. İHR. SAN. VE TİC. LTD. ŞTİ.  
Veliköy OSB 4. Cadde No:20/A Çerkezköy/TEKİRDAĞ

www.canotomotiv.com.tr / turtlecancarry.com / turtlecancarry.eu / turtlecancarry.com.tr  
+90 282 746 1320 info@canotomotiv.com.tr

MB05079 / Rev.03 / 05.12.2023 (ÖMER)