



### FIRST TIME INSTALLATION

- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION




### ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05083(A/B-TYPE)

### COMPATIBLE VEHICLES

MBNZ XCLSS DOUBLE CAB 18-  
 NSS NVR (D40) DOUBLE CAB 04-14  
 NSS NVR (D23) DOUBLE CAB 15-  
 NSS NP3 (D23) DOUBLE CAB 15-  
 REN ALSKN DOUBLE CAB 17-  
 NSS PFNDR (R51) SUV 05-12  
 NSS PTRL (Y61) SUV 97-13

### USE OF CN-... PARTS

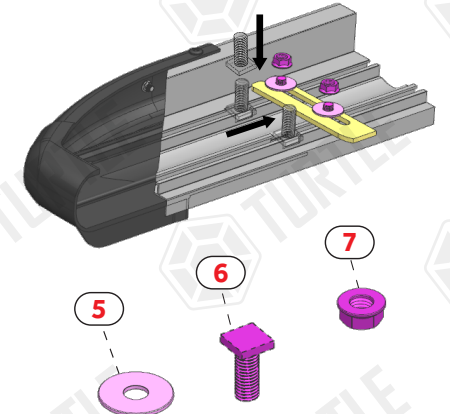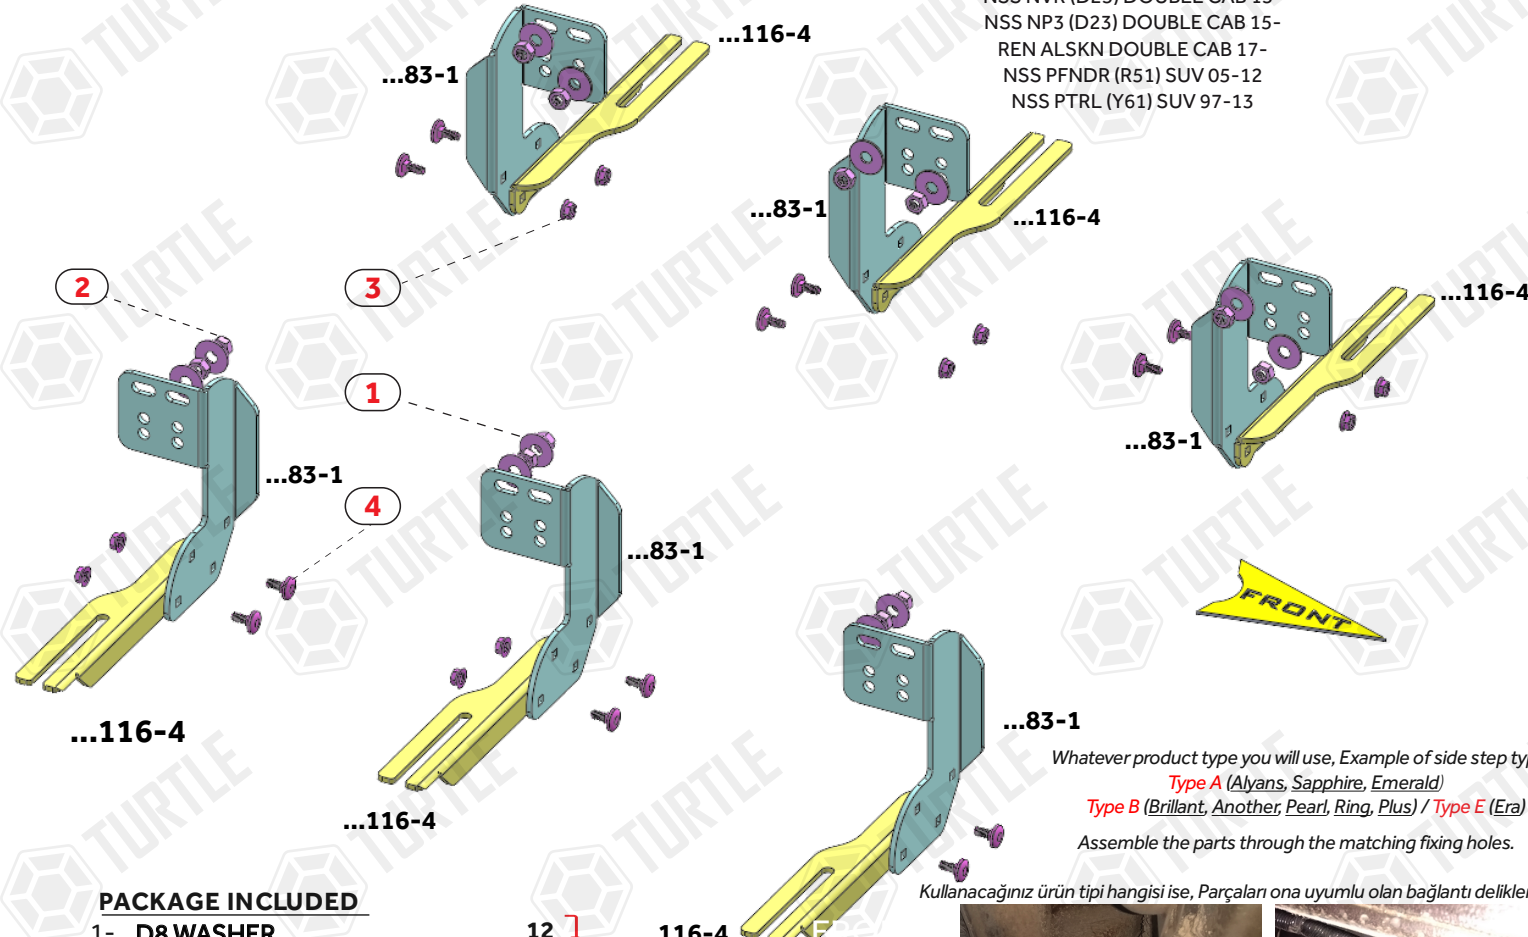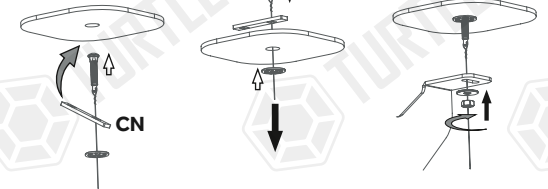

### PACKAGE INCLUDED

1- D8 WASHER	12
2- M8 HEX NUT	12
3- M6x15 LOCK HEADED BOLT	12
4- M6 HEX FLANGE NUT	12
5- D8 WASHER	12
6- M8x20 SQUARE BOLT	12
7- M8 FLANGE NUT	12

ZIPLOCK BAG


Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

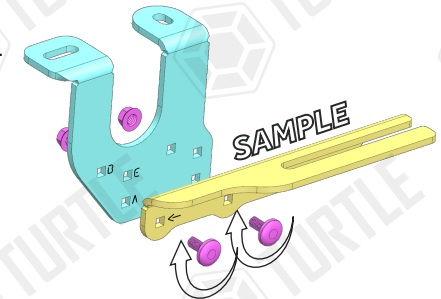

MB05083/ Rev.03/ 11.09.2023 (ÖMER)