



FIRST TIME INSTALLATION


- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)



Product Code: MB05140(A/B-TYPE)

COMPATIBLE VEHICLES

FRD TRNST TRAIL 14-

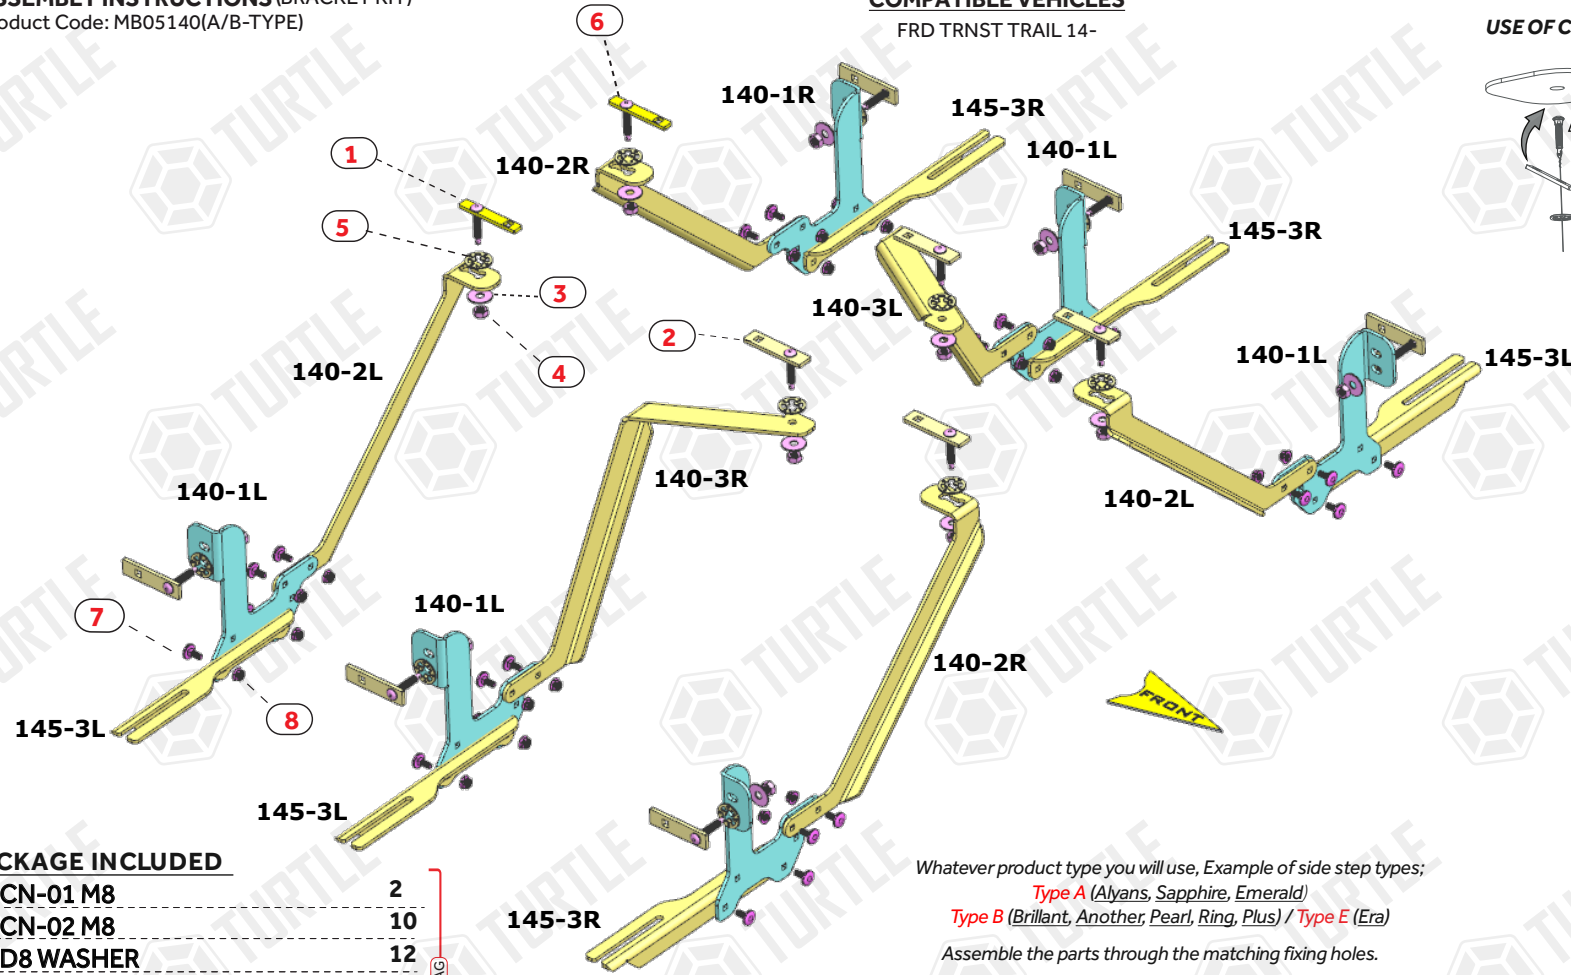

USE OF CN-... PARTS

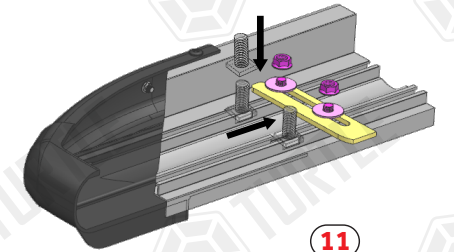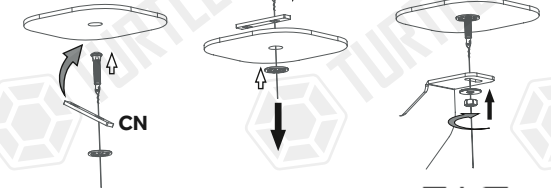

PACKAGE INCLUDED

1- CN-01 M8	2
2- CN-02 M8	10
3- D8 WASHER	12
4- M8 HEX NUT	12
5- CLAMPING PIECE	12
6- M8 SPECIAL BOLT	12
7- M6x15 LOCK HEADED BOLT	24
8- M6 HEX FLANGE NUT	24
9- D8 WASHER	12
10- M8x20 SQUARE BOLT	12
11- M8 FLANGE NUT	12

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



MB05140/ Rev.03/ 13.09.2023 (ÖMER)