



### FIRST TIME INSTALLATION


- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

### ASSEMBLY INSTRUCTIONS (BRACKET KIT)





Product Code: MB05150(A/B-TYPE)

### COMPATIBLE VEHICLES

CHVR TBLZR SUV 12-18

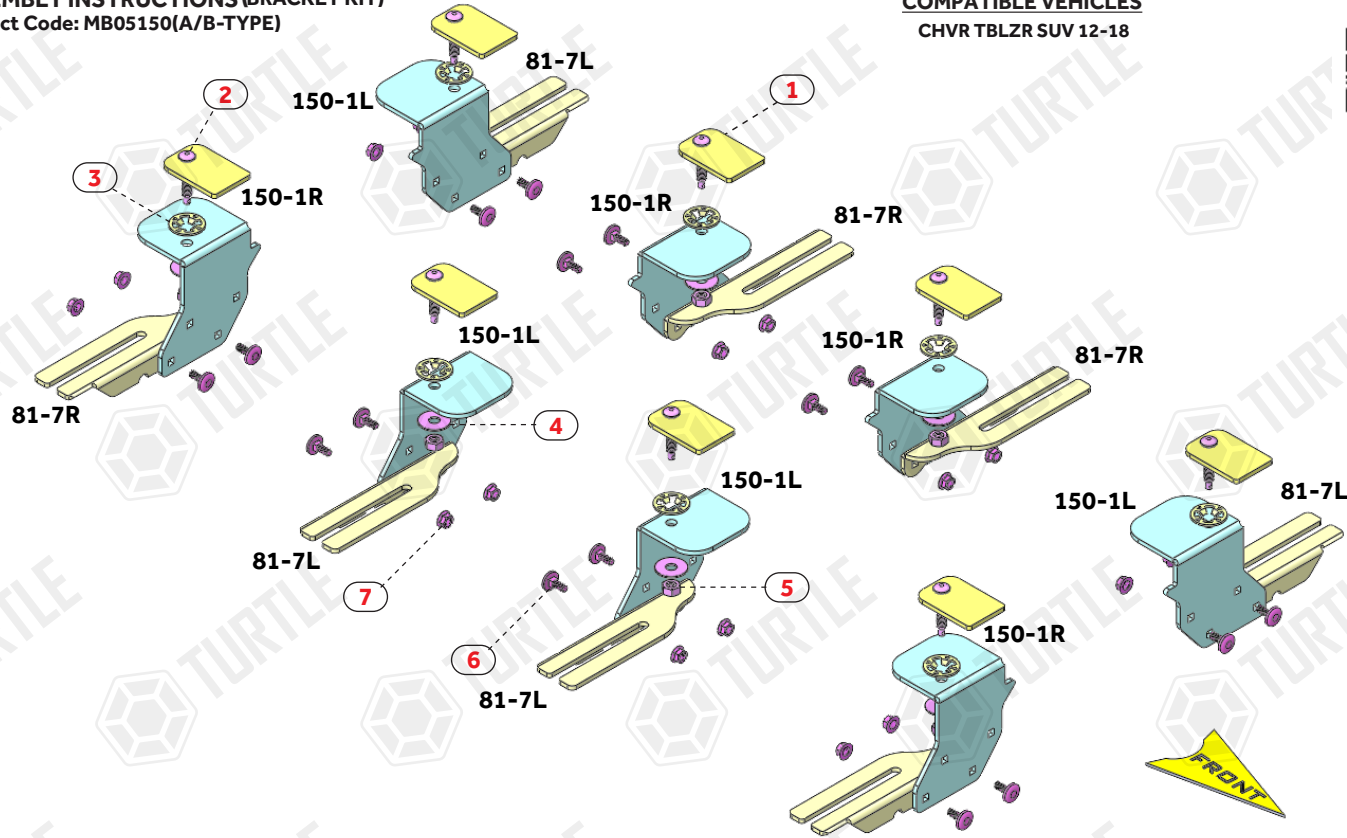

### USE OF CN-... PARTS

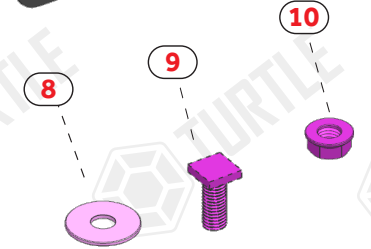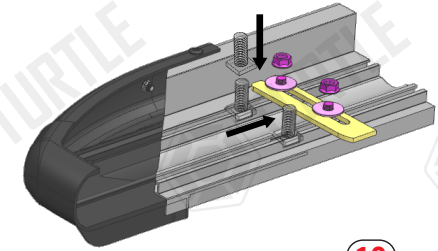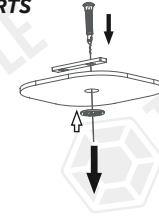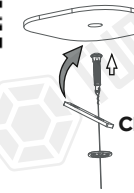

**81-7R** Whatever product type you will use, Example of side step types;  
**Type A** (Alyans, Sapphire, Emerald)  
**Type B** (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)  
 Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



### PACKAGE INCLUDED

1- CN-12 M8	8
2- M8 SPECIAL BOLT	8
3- CLAMPING PIECE	8
4- D8 WASHER	8
5- M8 HEX NUT	8
6- M6x15 LOCK HEADED BOLT	16
7- M6 HEX FLANGE NUT	16
8- D8 WASHER	16
9- M8x20 SQUARE BOLT	16
10- M8 FLANGE NUT	16

ZIPLOCK BAG