



### FIRST TIME INSTALLATION

- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION





### ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05169 (A/B-TYPE)

### COMPATIBLE VEHICLES

- CIT JMPR 06- 4dr VAN
- CIT RLY 06- 4dr VAN
- FI DCTO 06- 4dr VAN
- OPL MVN 21- 4dr VAN
- PEU BXR 06- 4dr VAN
- PEU MNGR 06- 4dr VAN
- RAM PRMSTR 14- 4dr VAN

### USE OF CN-... PARTS

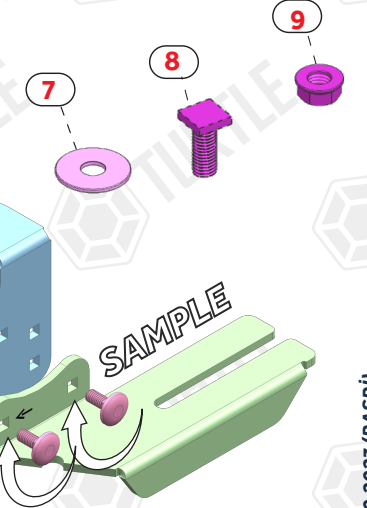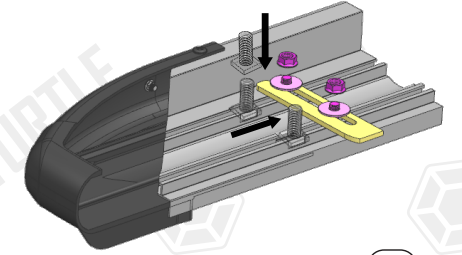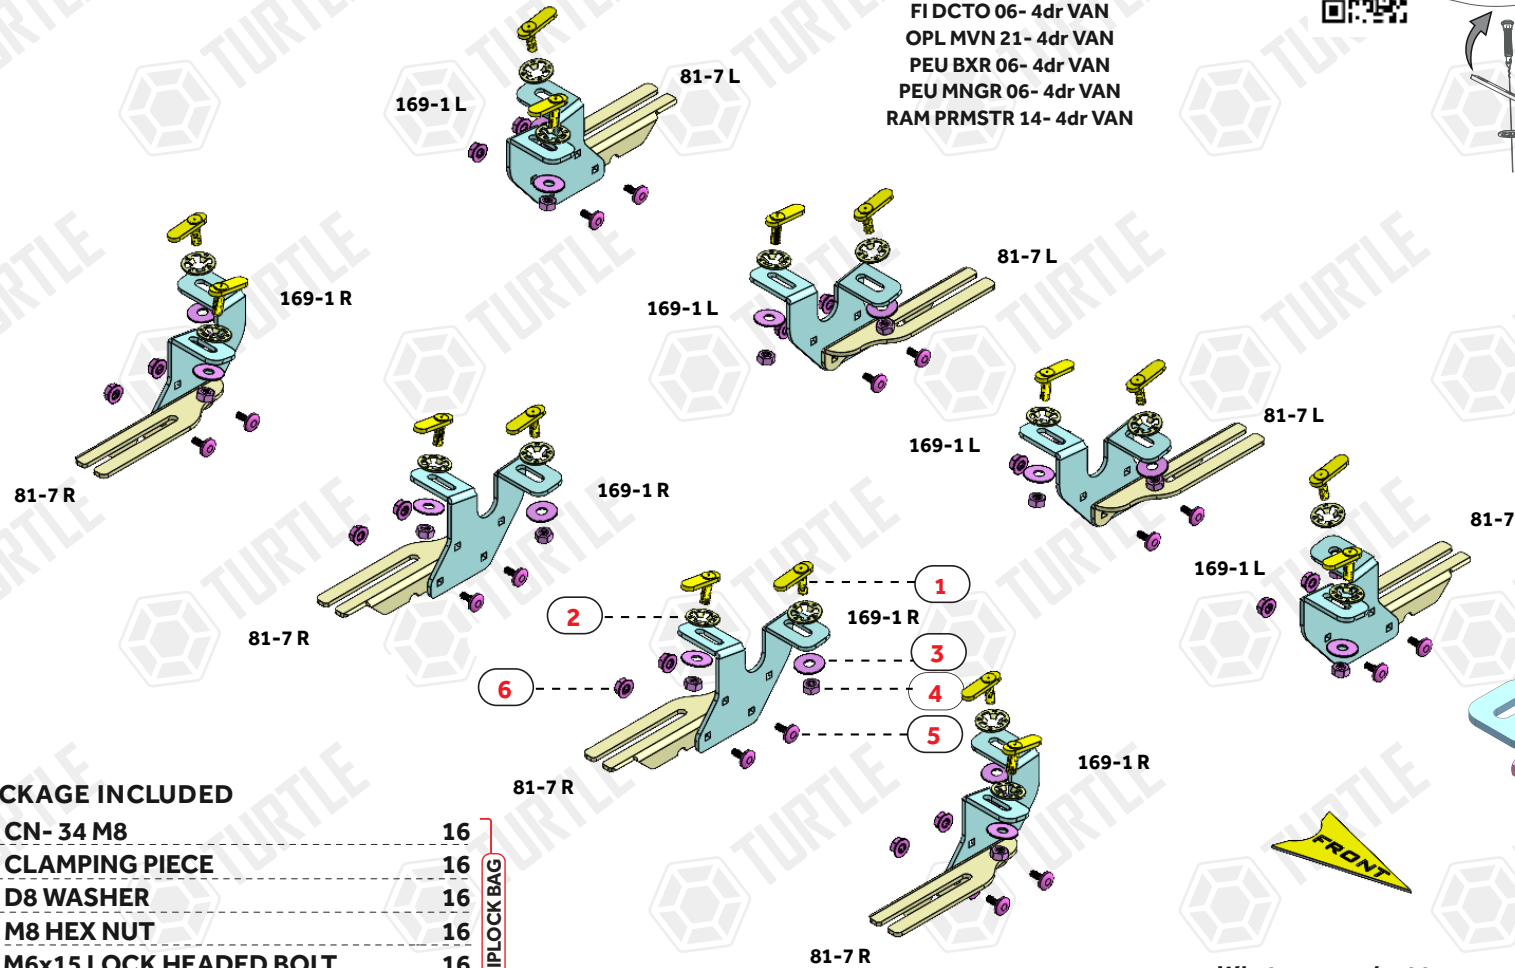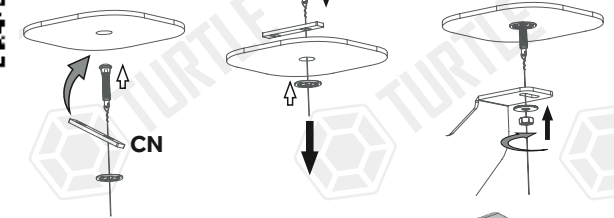

### PACKAGE INCLUDED

1- CN- 34 M8	16
2- CLAMPING PIECE	16
3- D8 WASHER	16
4- M8 HEX NUT	16
5- M6x15 LOCK HEADED BOLT	16
6- M6 HEX FLANGE NUT	16
7- D8 WASHER	16
8- M8x20 SQUARE BOLT	16
9- M8 FLANGE NUT	16

ZIPLOCK BAG

Whatever product type you will use, Example of side step types;

- Type A** (Alyans, Sapphire, Emerald)
  - Type B** (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)
- Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.