



ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB06133 (E-TYPE)




FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

COMPATIBLE VEHICLES

- CTR N SPC TOUR (Mk3) 17-
- TYT PACE VERS (Mk3) 17-
- OPL ZFR LIFE (Mk3) 19-
- CTR N DSPTC (Mk3) 17-
- PEU XPRT (Mk3) 17-
- PEU TRVL (Mk3) 17-
- TYT PACE (Mk3) 17-

USE OF CN-... PARTS

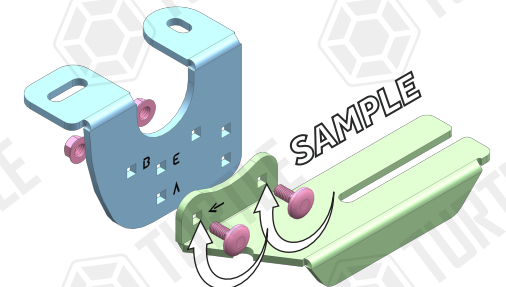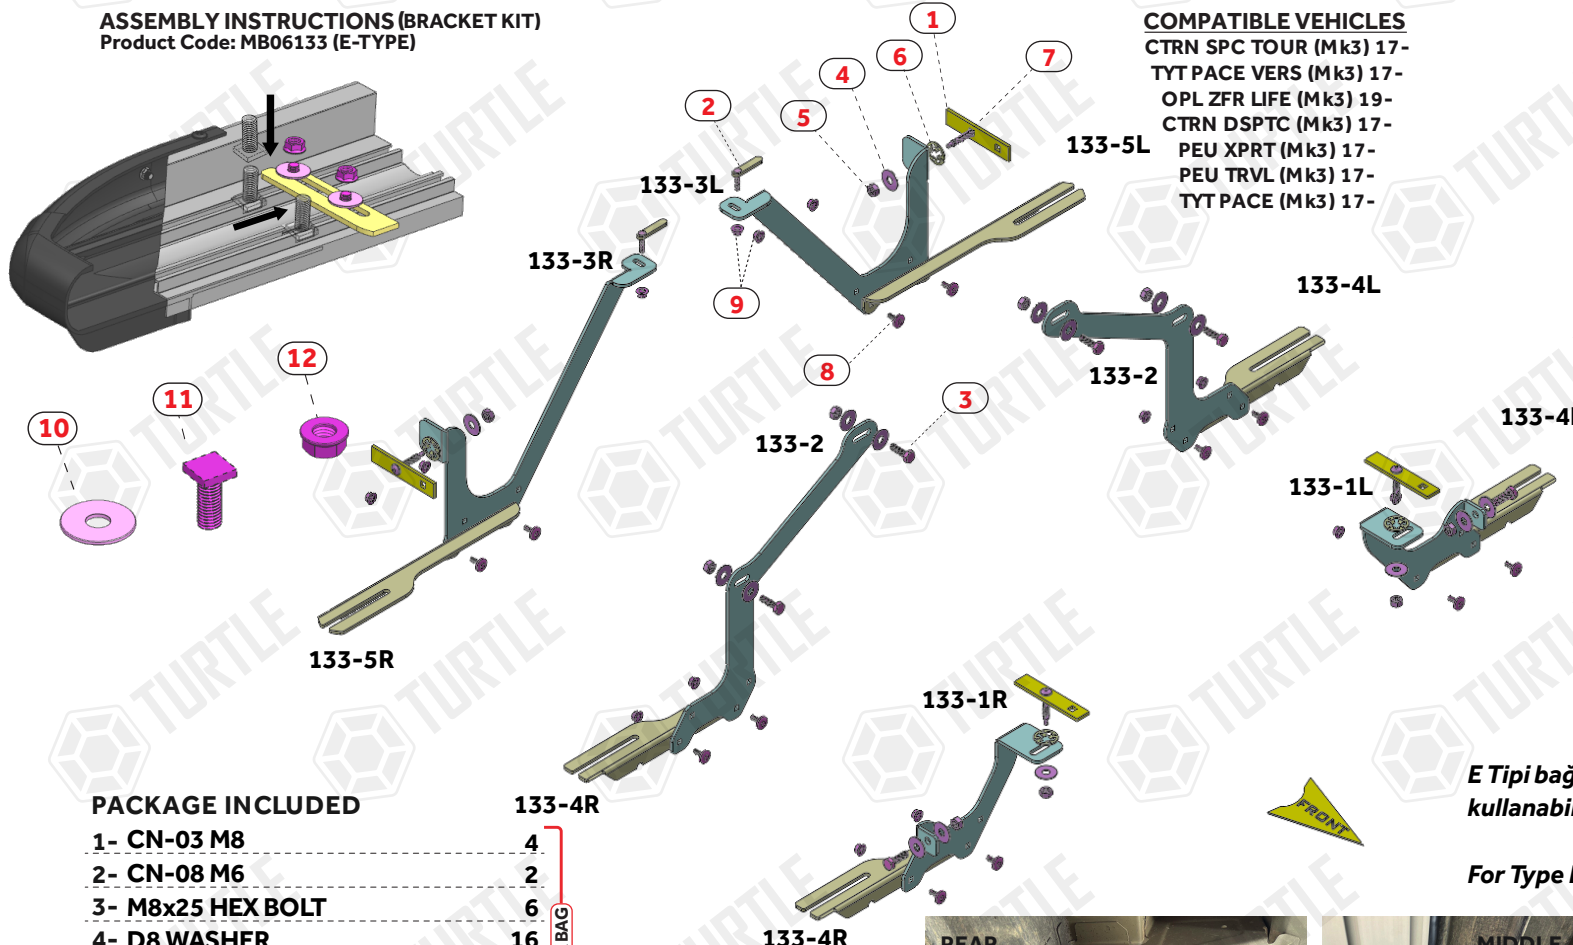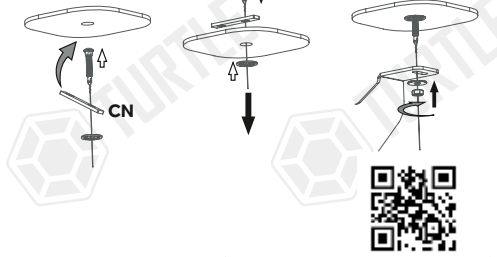

E Tipi bağlantı için B yazılı bağlantı deliğini kullanabilirsiniz.

For Type E connection, you can use the connection hole

PACKAGE INCLUDED

1- CN-03 M8	4
2- CN-08 M6	2
3- M8x25 HEX BOLT	6
4- D8 WASHER	16
5- M8 HEX NUT	10
6- CLAMPING PIECE	6
7- M8 SPECIAL BOLT	4
8- M6x15 LOCK HEADED BOLT	12
9- M6 HEX FLANGE NUT	14
10-D8 WASHER	12
11-M8X20 SQUARE BOLT	12
12-M8 FLANGE NUT	12

133-4R

ZIPLOCKBAG

