




ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR01024 (Crown)

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

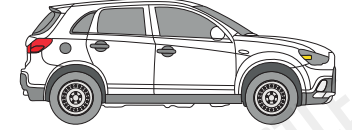


MIT ASX RVR SUV 10- (w/o Glass Roof)

Metal parçayı şekilde gösterildiği gibi plastik parçanın üzerine yerleştirip civata kullanarak sıkınız.

Place the metal part on the plastic part as shown in the figure and tighten it using bolts.

1 M6 klipsi metal parçada belirtilen yere takınız.
Attach the M6 clip to the place indicated on the metal part.

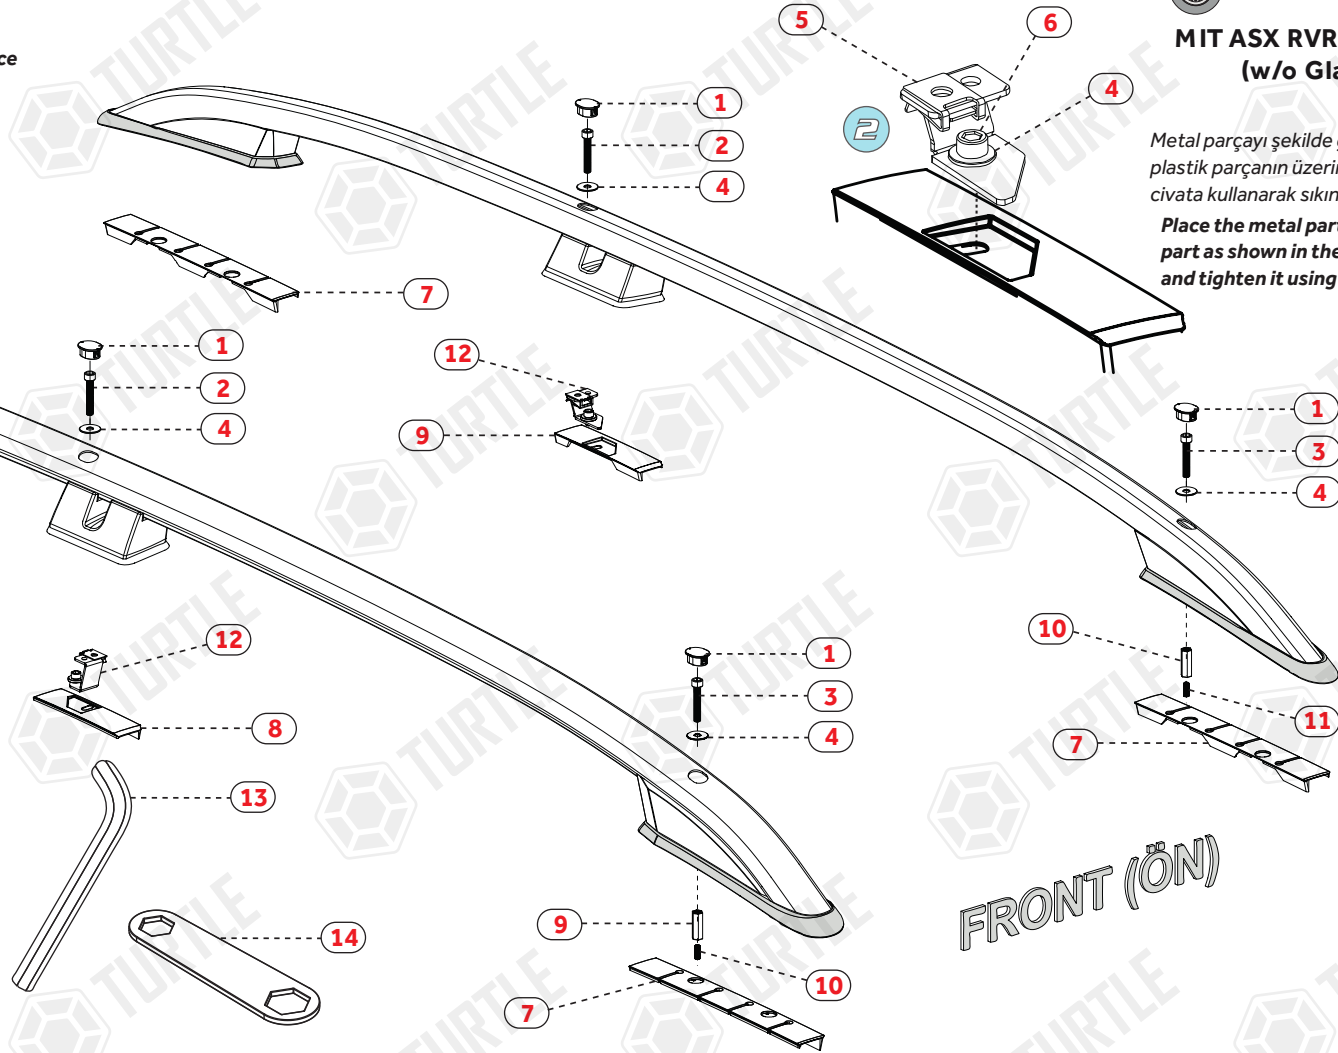

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	4
2-	M6x35 INBUS BOLT (5Nm)	2
3-	M6x25 INBUS BOLT (5Nm)	2
4-	M6 WASHER	6
5-	M6 SPEEDNUT	2
6-	M6x10 INBUS BOLT (5Nm)	2
7-	PLASTIC PART F/R	4
8-	PLASTIC PART MID RIGHT	1
9-	PLASTIC PART MID LEFT	1
10-	M6x30 COUPLING NUT	2
11-	M6 SETSCREW	2
12-	BRACKET	2
13-	5mm ALLEN WRENCH	1
14-	10-13 WRENCH	1