




ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR01033 - MR01034 (Crown)

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION


SWB - LWB

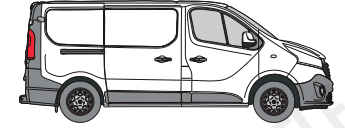

VXHL VVR (X82) VAN 14-18
OPL VVR (X82) VAN 14-18
NSS NV300 (X82) VAN 14-
MIT XPRSS (X82) VAN 14-
REN TRFC (X82) VAN 14-
FI TLNT (X82) VAN 14-

Civata yuvasının etrafına sünger
şekildeki gibi yapıştırınız.
Süngerin ortasındaki boşluğa
sıvı contayı bolca sıkınız.
Uygulamayı 3dk içerisinde
kurumadan tamamlayınız.

Stick the sponge tape around the
bolt slot as shown in the figure.
Squeeze the liquid rubber in the
middle of the sponge as a thick layer.
Apply in 3min before silicone dry.

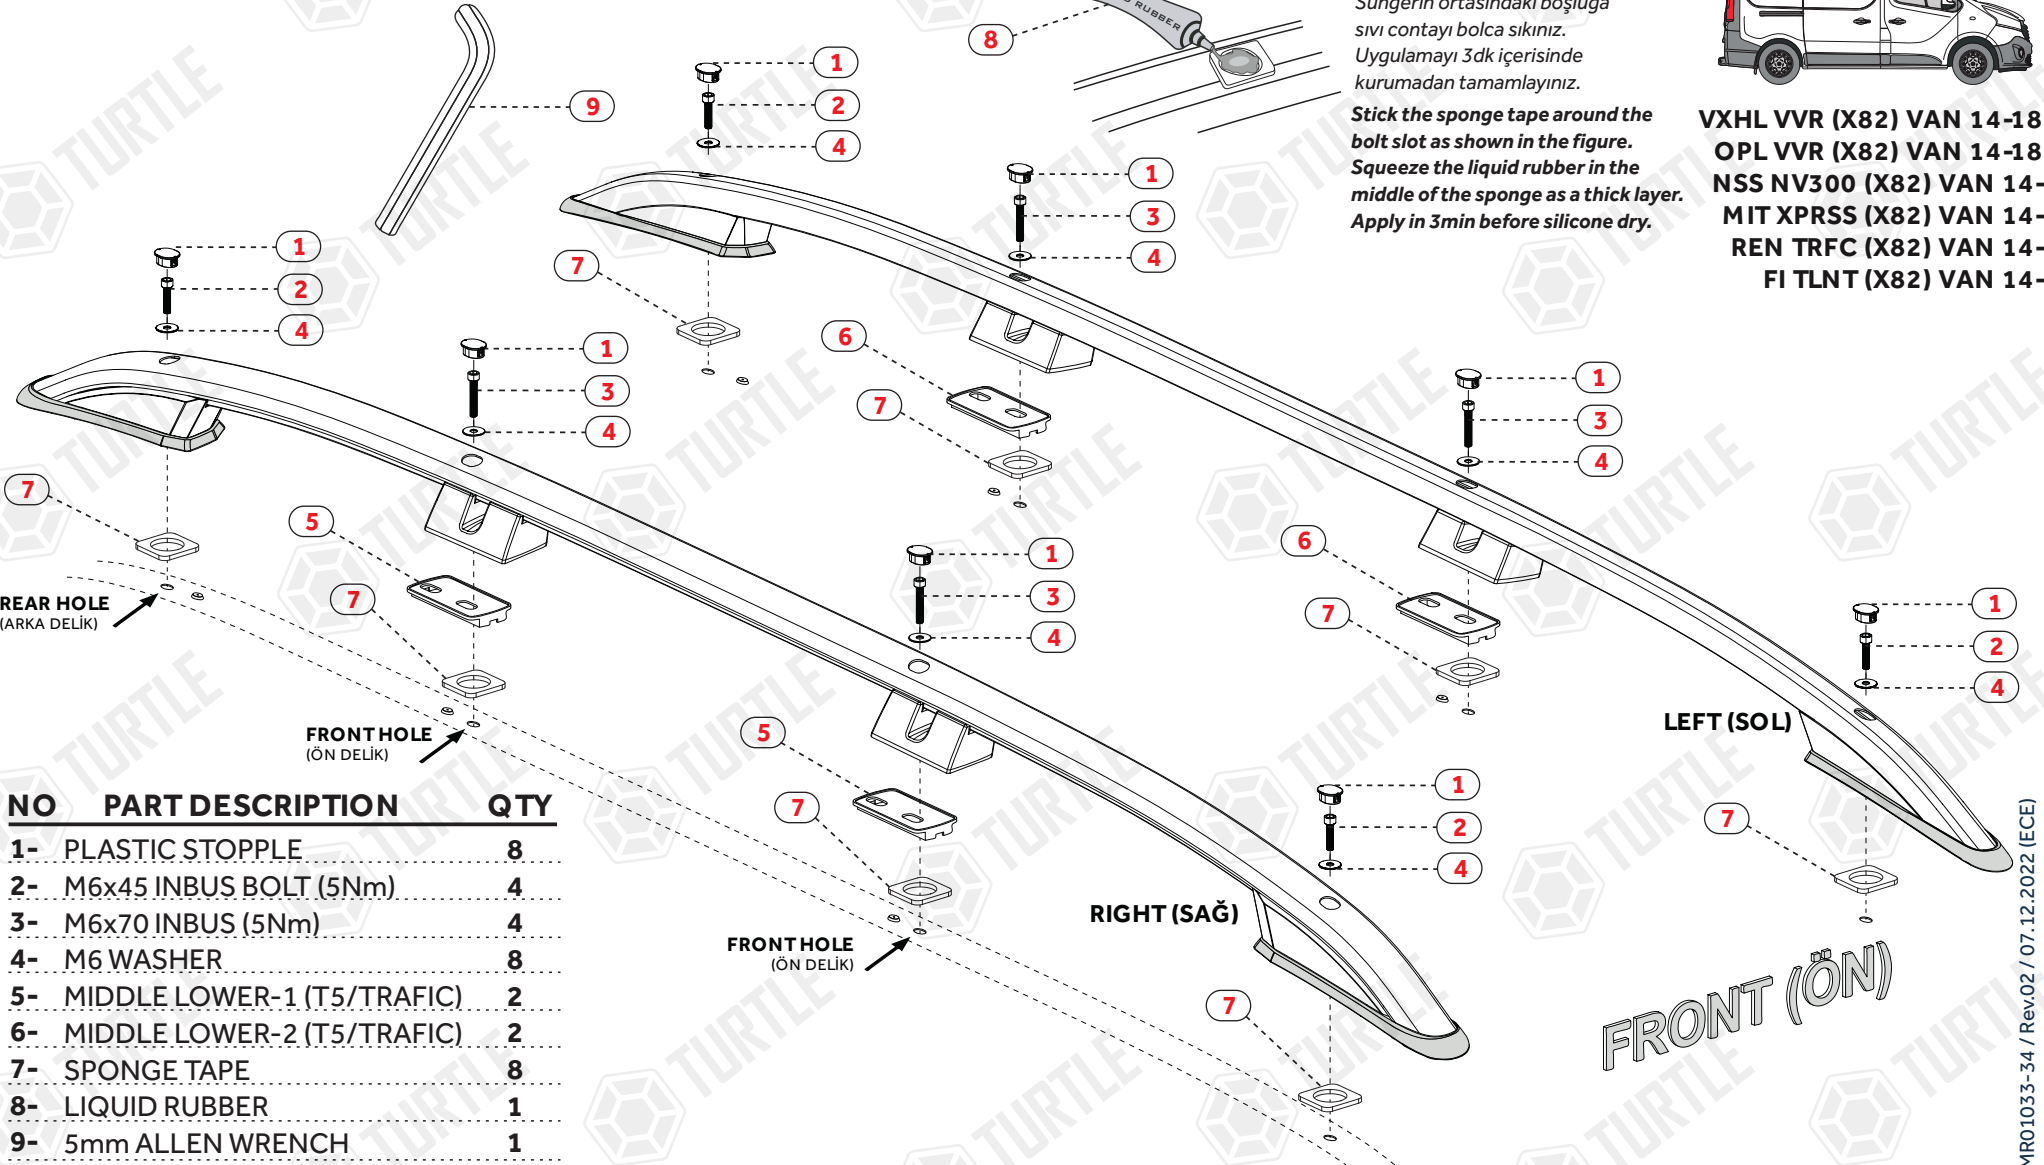

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	8
2-	M6x45 INBUS BOLT (5Nm)	4
3-	M6x70 INBUS (5Nm)	4
4-	M6 WASHER	8
5-	MIDDLE LOWER-1 (T5/TRAFIC)	2
6-	MIDDLE LOWER-2 (T5/TRAFIC)	2
7-	SPONGE TAPE	8
8-	LIQUID RUBBER	1
9-	5mm ALLEN WRENCH	1