




ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR01047 (Crown)


FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

LWB

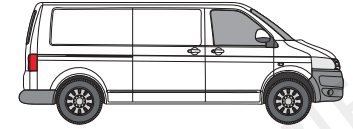

VWGN TRNSPT (T5/T6) VAN 03-
VWGN CALFRN (T5/T6) VAN 03-
VWGN CARVL (T5/T6) VAN 03-
VWGN MVAN (T5/T6) VAN 03-
VWGN SHTTL (T5/T6) VAN 03-

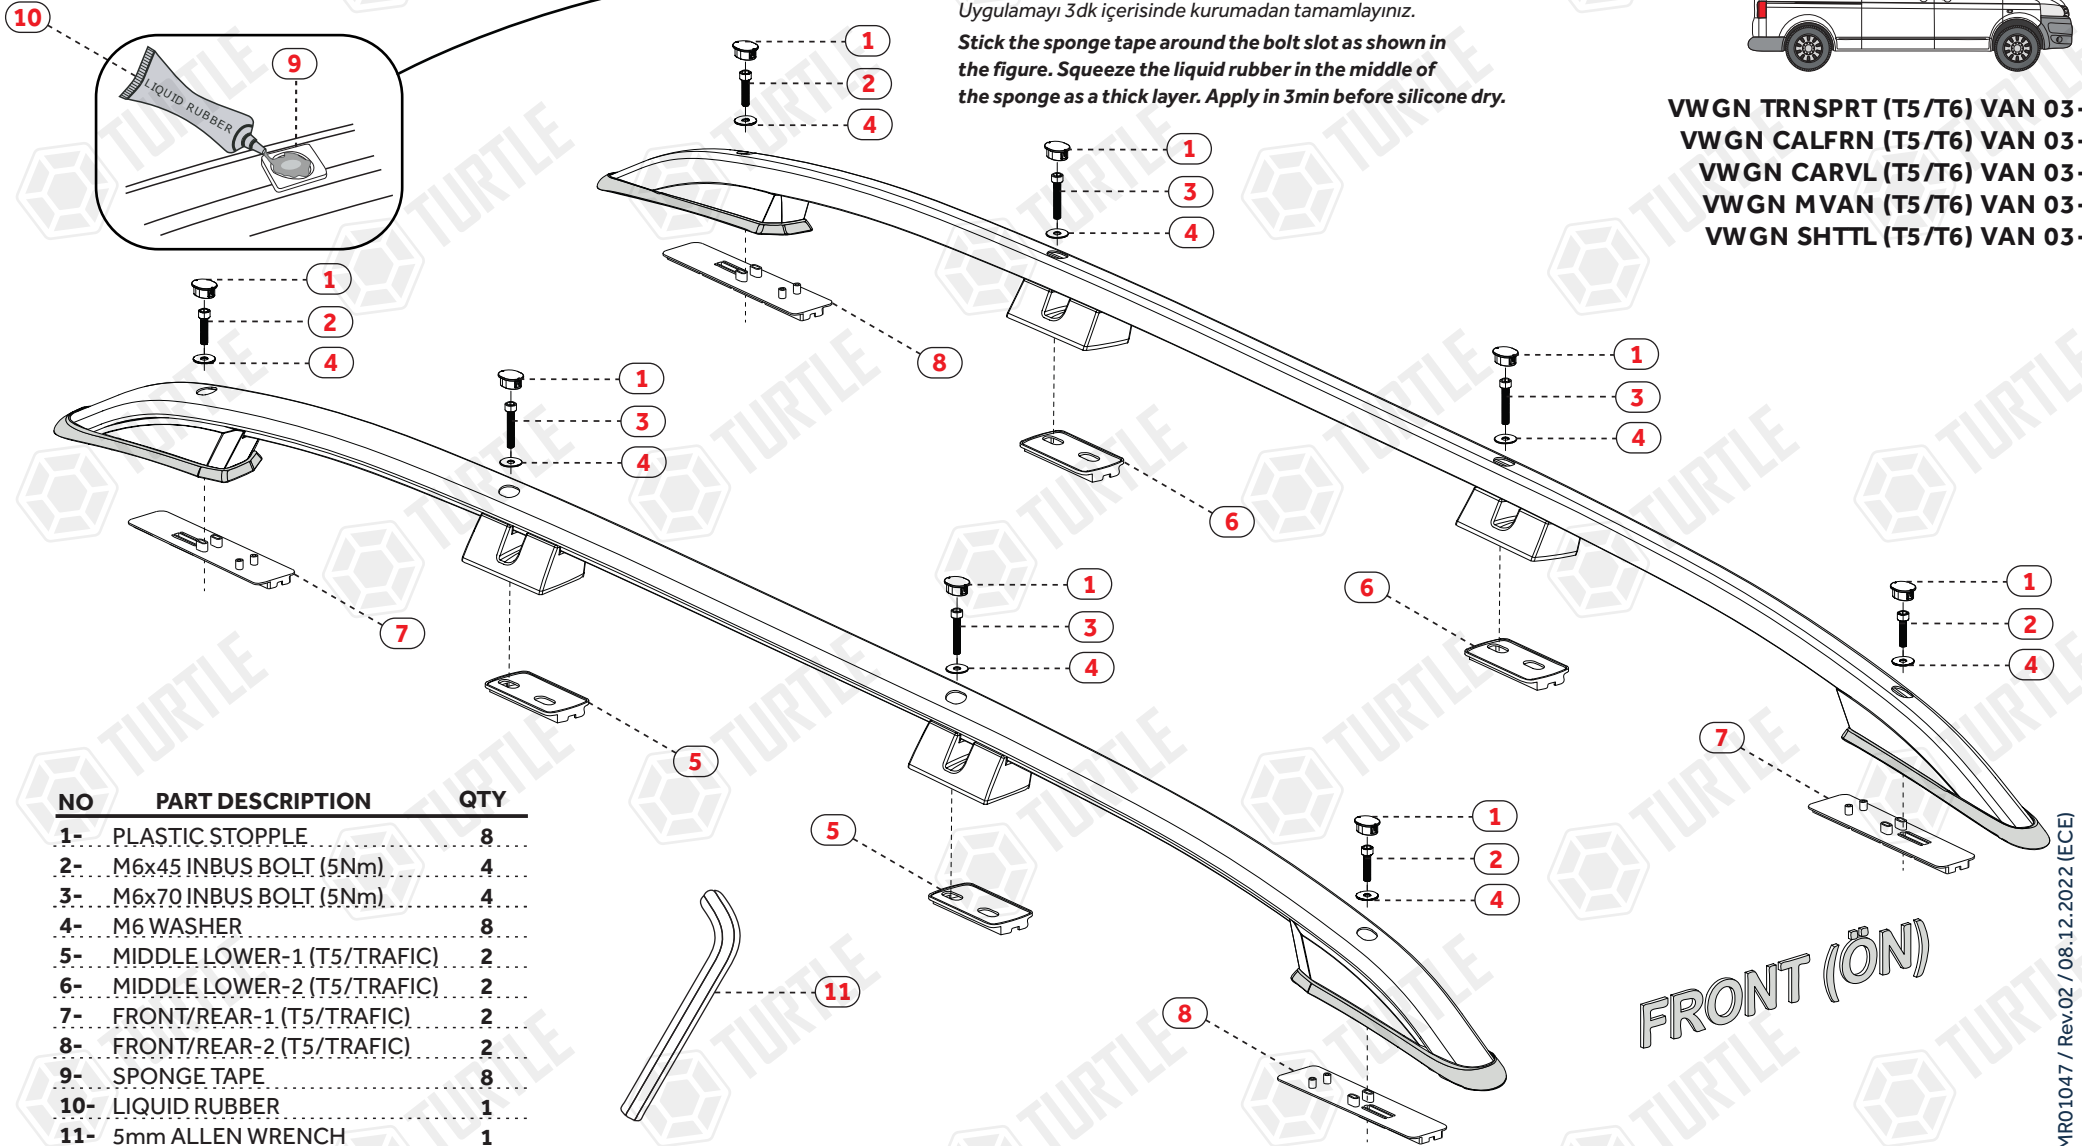

Civata yuvasının etrafına süngerî şekildedeki gibi yapıştırınız.
Süngerin ortasındaki boşluğa sıvı contayı bolca sıkınız.
Uygulamayı 3dk içerisinde kurumadan tamamlayınız.

Stick the sponge tape around the bolt slot as shown in the figure. Squeeze the liquid rubber in the middle of the sponge as a thick layer. Apply in 3min before silicone dry.

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	8
2-	M6x45 INBUŞ BOLT (5Nm)	4
3-	M6x70 INBUŞ BOLT (5Nm)	4
4-	M6 WASHER	8
5-	MIDDLE LOWER-1 (T5/TRAFIC)	2
6-	MIDDLE LOWER-2 (T5/TRAFIC)	2
7-	FRONT/REAR-1 (T5/TRAFIC)	2
8-	FRONT/REAR-2 (T5/TRAFIC)	2
9-	SPONGE TAPE	8
10-	LIQUID RUBBER	1
11-	5mm ALLEN WRENCH	1