




ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR01056 (Crown)

M6 klipsini araç tavanında
belirtilen yere takın.

Attach the M6 speednut to the place
indicated on the vehicle roof.

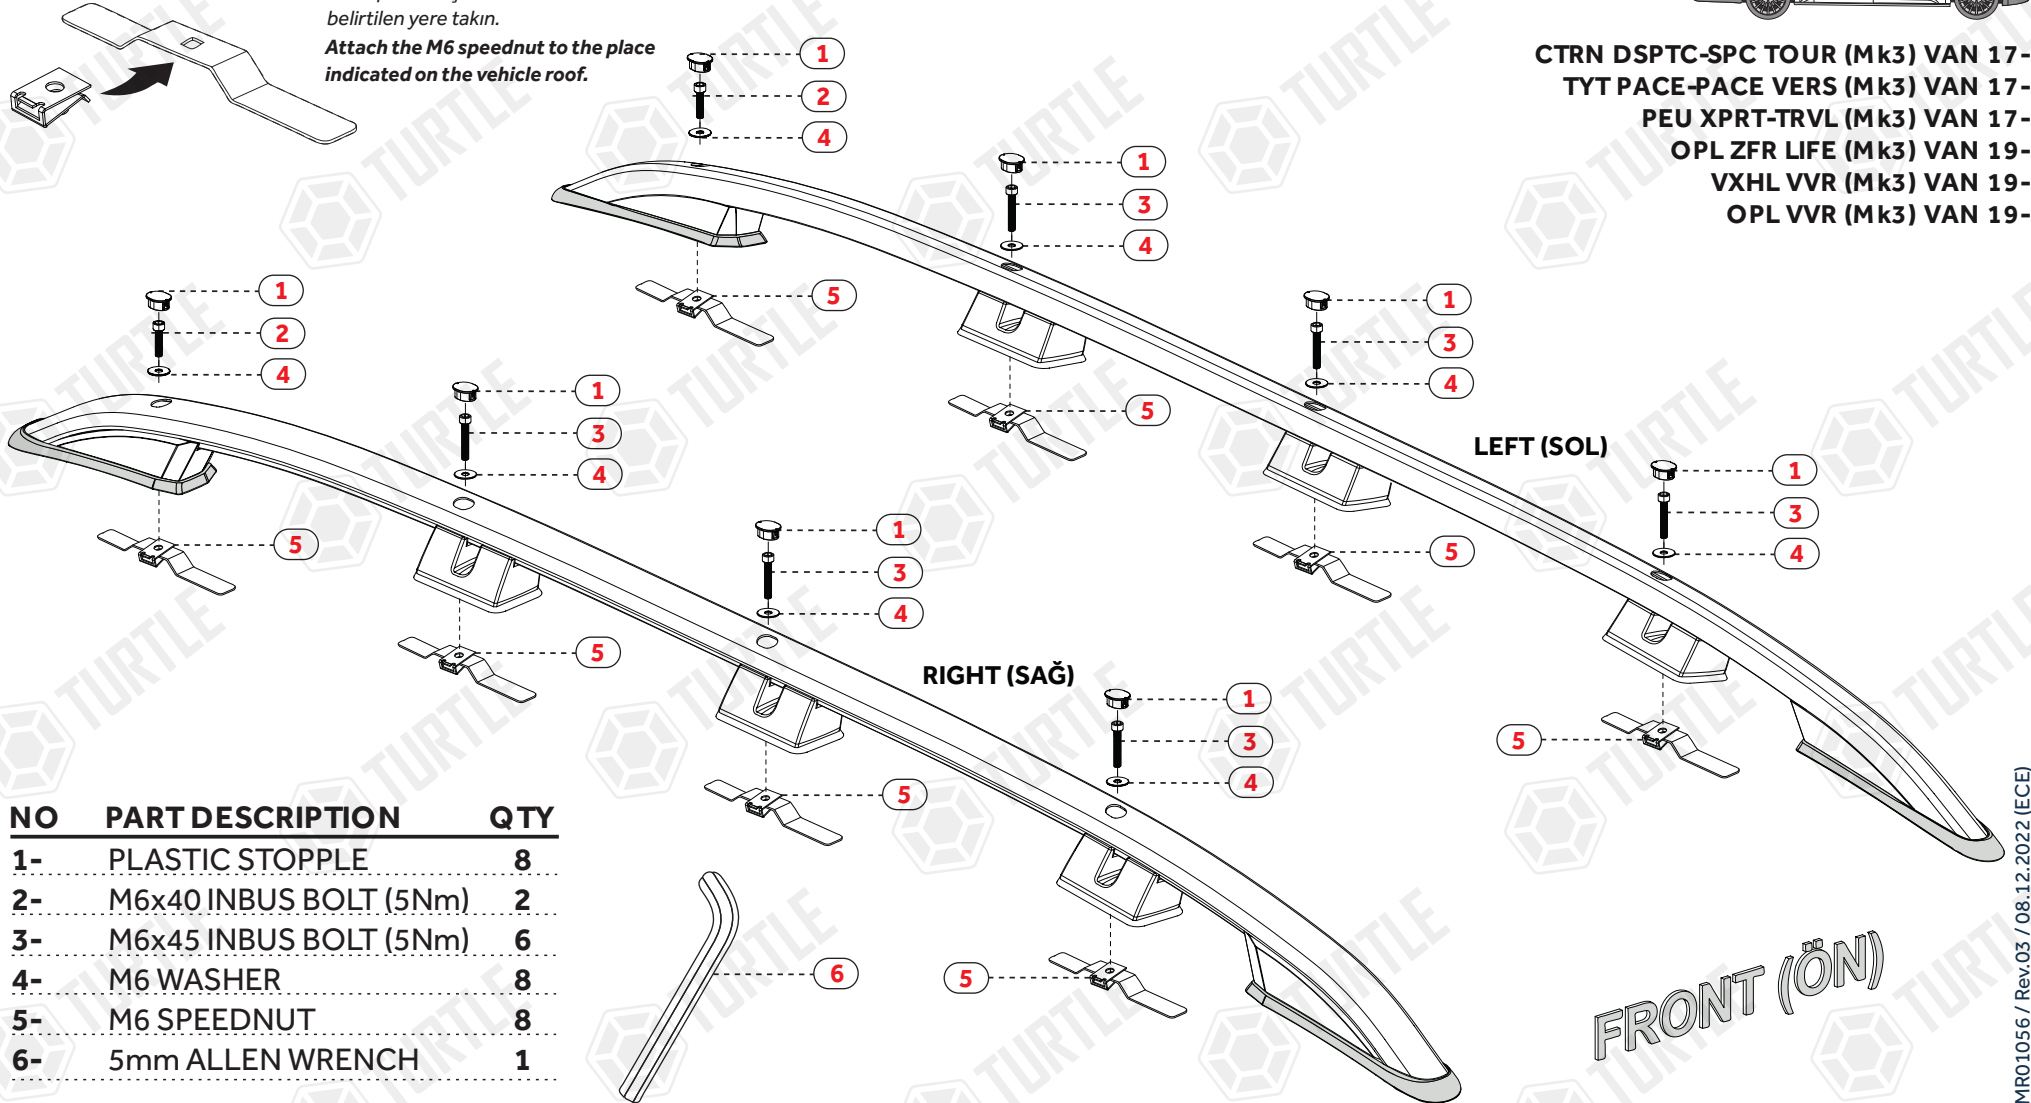

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	8
2-	M6x40 INBUS BOLT (5Nm)	2
3-	M6x45 INBUS BOLT (5Nm)	6
4-	M6 WASHER	8
5-	M6 SPEEDNUT	8
6-	5mm ALLEN WRENCH	1


FIRST TIME INSTALLATION

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

L3 LONG

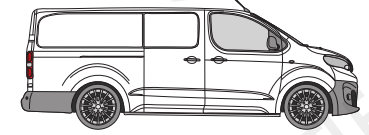

CTRN DSPTC-SPC TOUR (Mk3) VAN 17-
TYT PACE-PAVE VERS (Mk3) VAN 17-
PEU XPRT-TRVL (Mk3) VAN 17-
OPL ZFR LIFE (Mk3) VAN 19-
VXHL VVR (Mk3) VAN 19-
OPL VVR (Mk3) VAN 19-

MR01056 / Rev.03 / 08.12.2022 (ECE)