




FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR01082 (Crown)

Vehicle: VW TRNSPRT (T7) 22- 4dr VAN

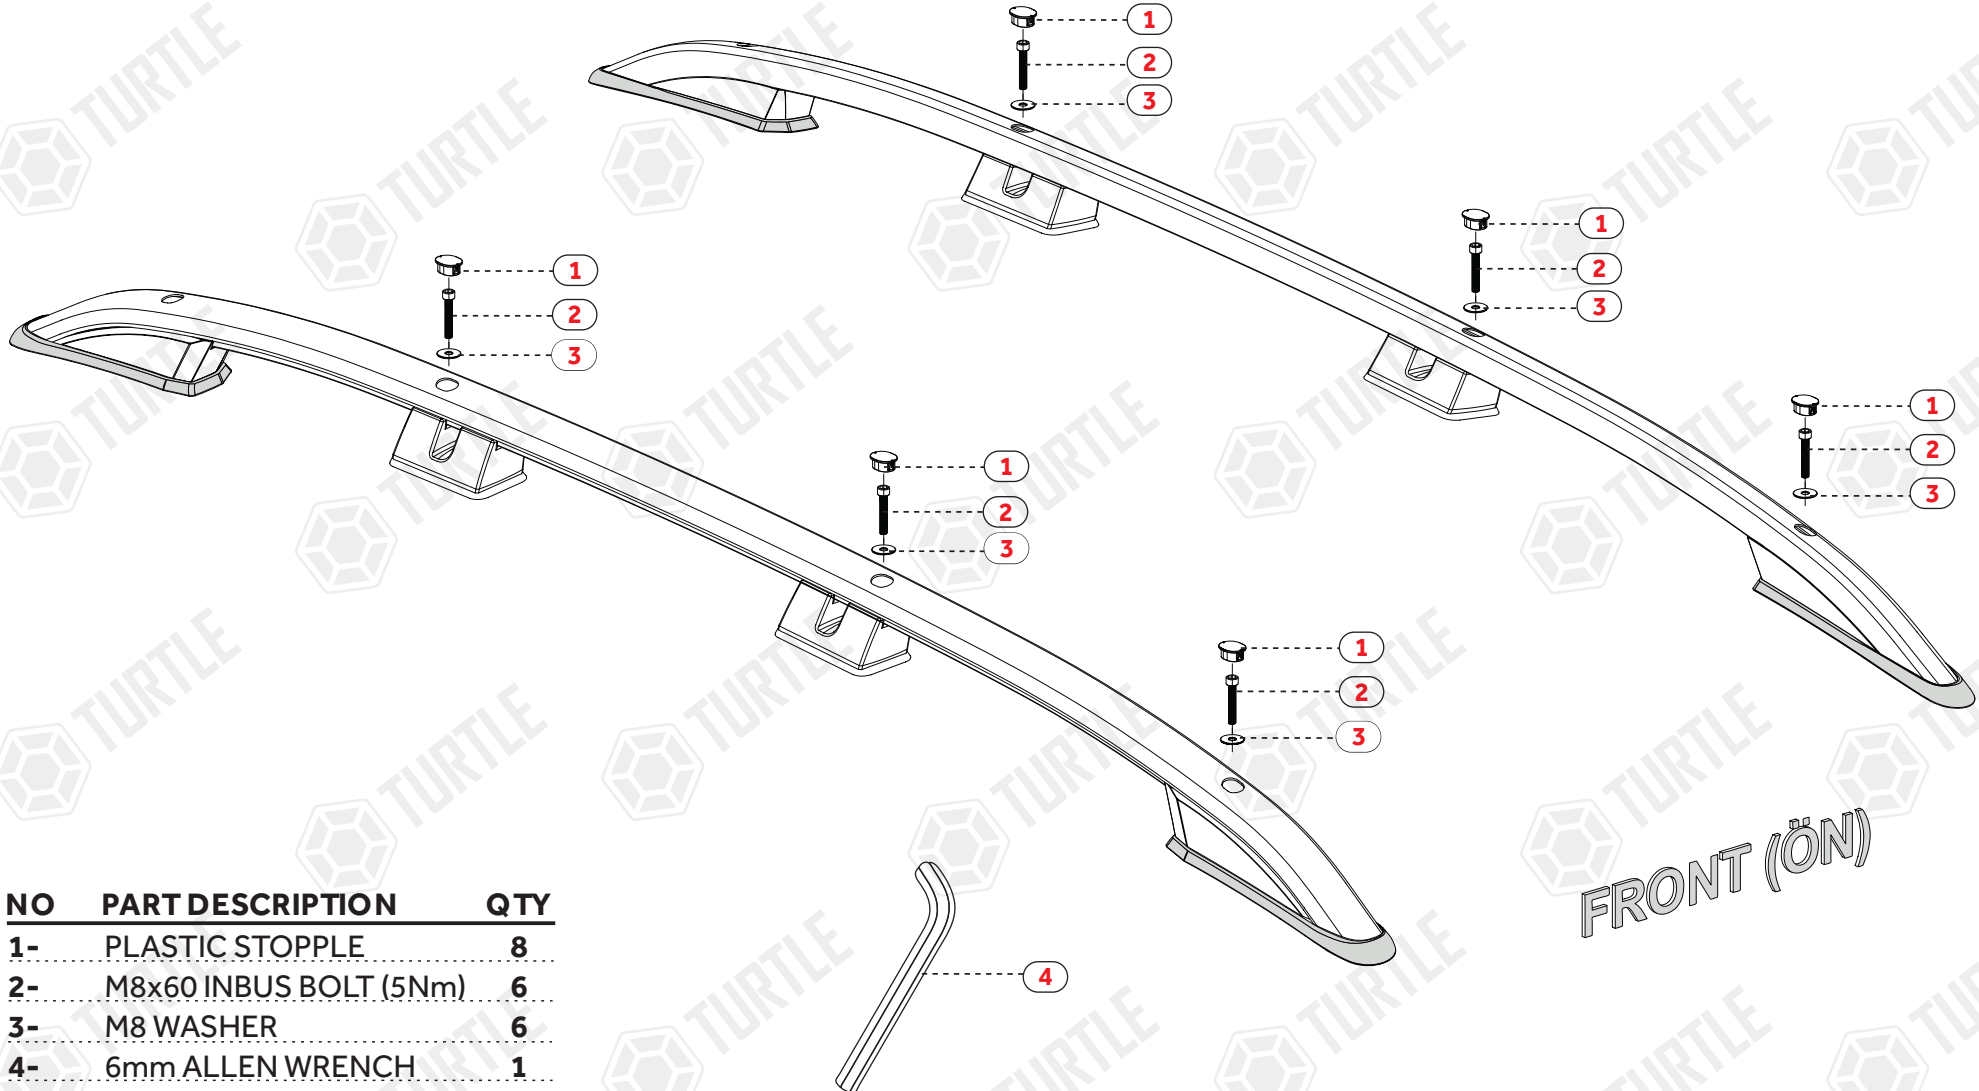

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	8
2-	M8x60 INBUS BOLT (5Nm)	6
3-	M8 WASHER	6
4-	6mm ALLEN WRENCH	1