




## FIRST TIME INSTALLATION

- \* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- \* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- \* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

### ASSEMBLY INSTRUCTIONS (ROOF RAIL)

Product Code: MR01085 (Crown)

Vehicle: FRD COUR 24-

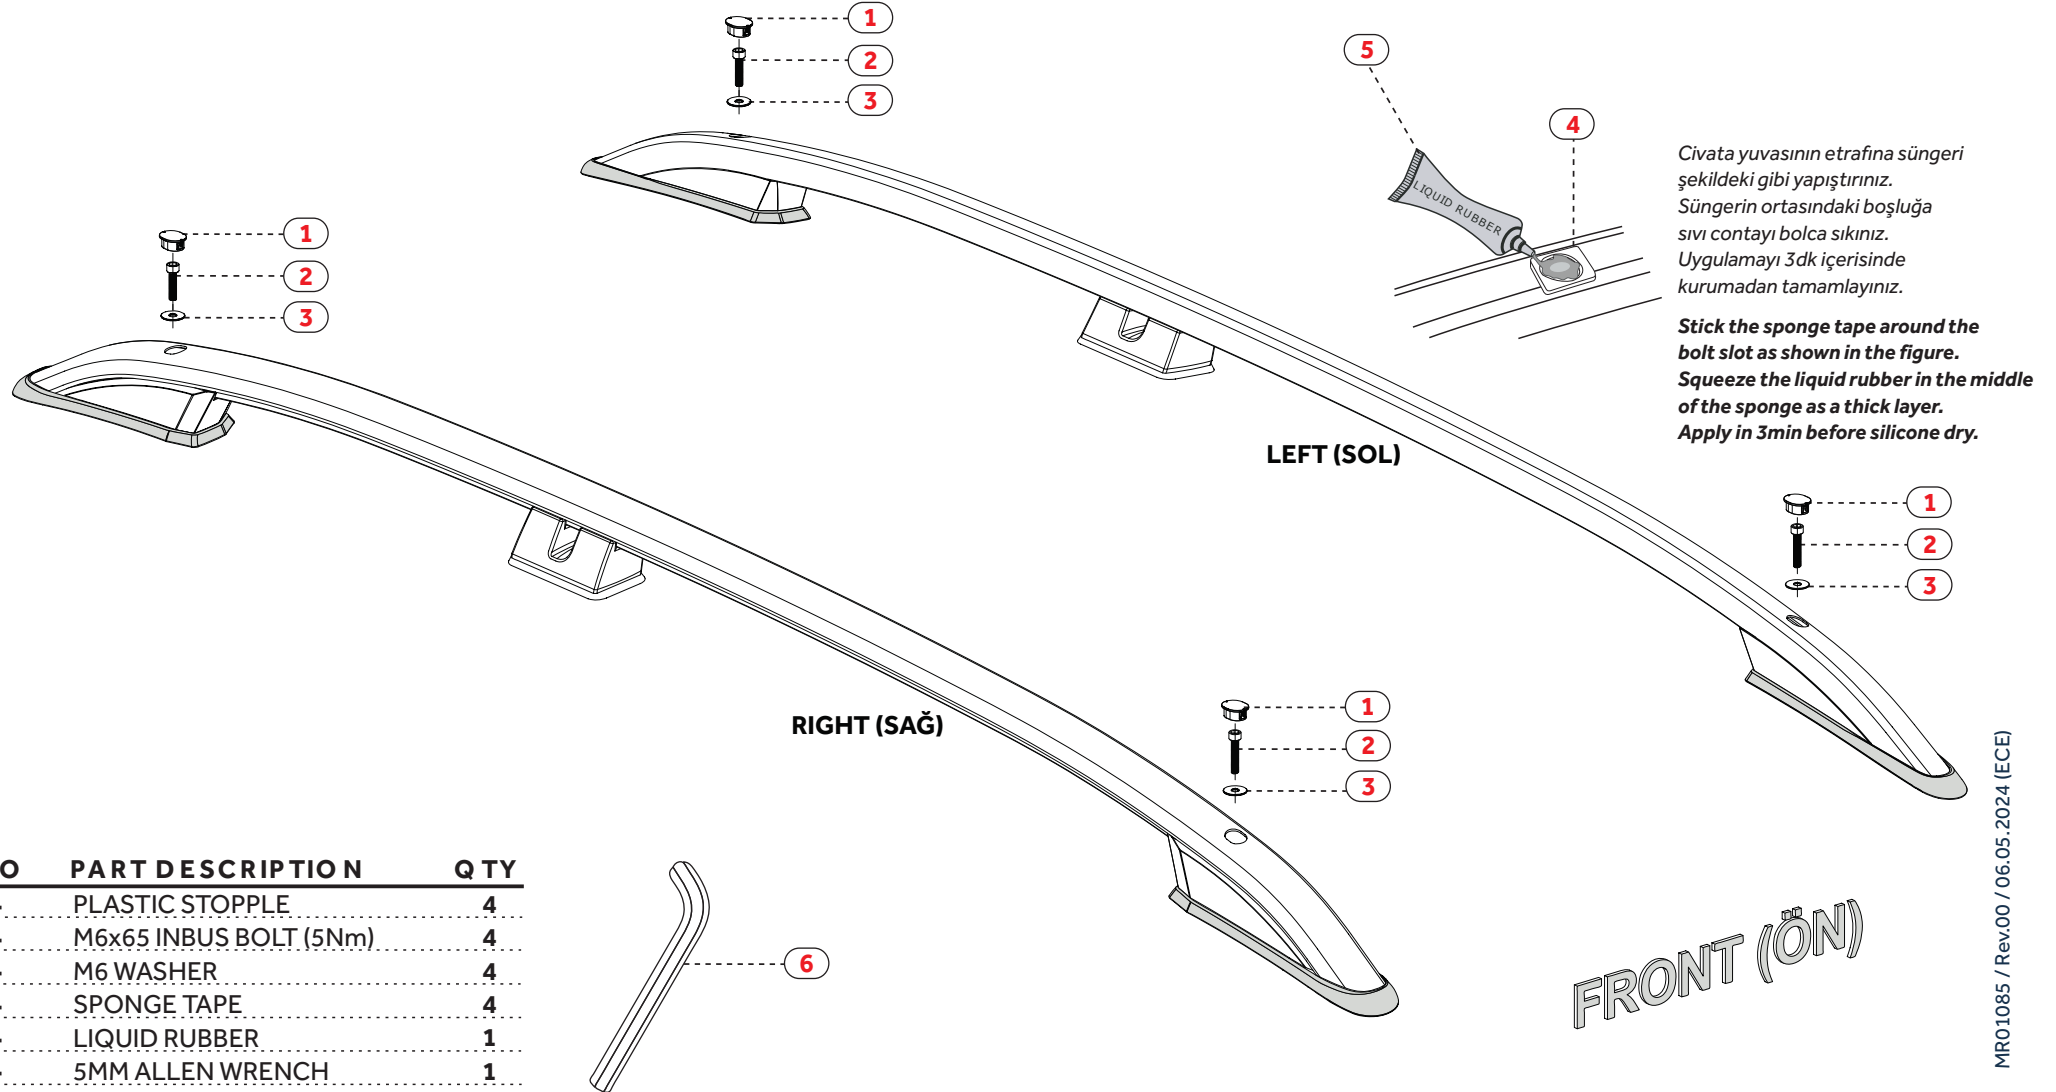

NO	PART DESCRIPTION	QTY
1-	PLASTIC STOPPLE	4
2-	M6x65 INBUS BOLT (5Nm)	4
3-	M6 WASHER	4
4-	SPONGE TAPE	4
5-	LIQUID RUBBER	1
6-	5MM ALLEN WRENCH	1