TURTLE

FIRST TIME INSTALLATION

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05141(A/B-TYPE)

COMPATIBLE VEHICLES

SYNG MUSS (Q200) DOUBLE CAB 18-
SYNG MUSS GRAND DOUBLE CAB 18-
SYNG RXT SPORTS DOUBLE CAB 18-
SYNG RHNO DOUBLE CAB 18-

USE OF CN-... PARTS

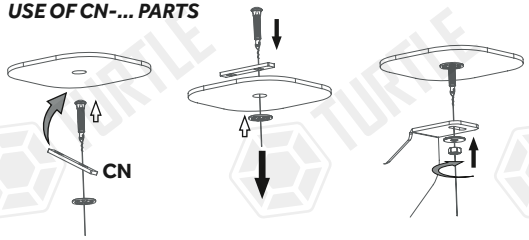

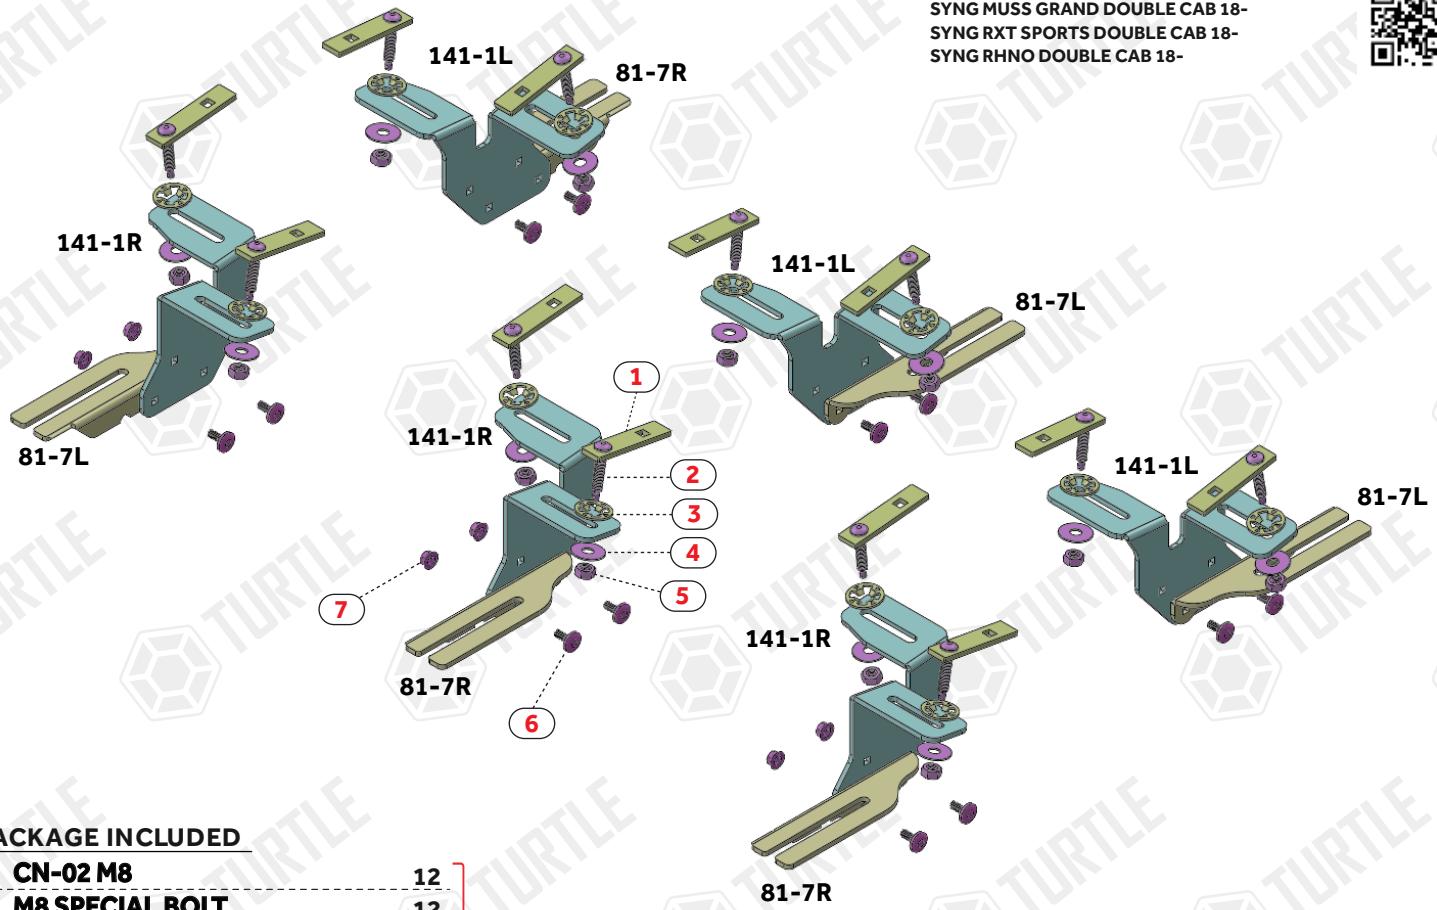

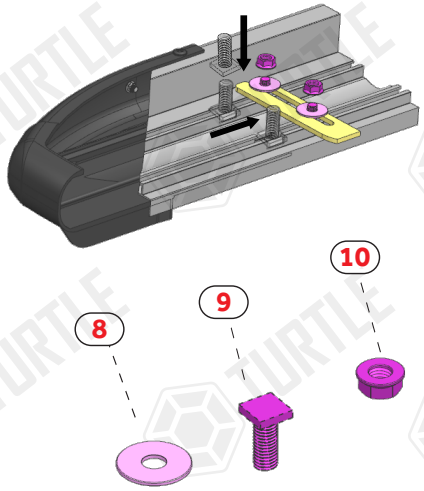

PACKAGE INCLUDED

1-	CN-02 M8	12	ZIPLOCK BAG
2-	M8 SPECIAL BOLT	12	
3-	CLAMPING PIECE	12	
4-	D8 WASHER	12	
5-	M8 HEX NUT	12	
6-	M6x15 LOCK HEADED BOLT	12	
7-	M6 HEX FLANGE NUT	12	
8-	*D8 WASHER*	12	ZIPLOCK BAG
9-	*M8x20 SQUARE BOLT*	12	
10-	*M8 FLANGE NUT*	12	

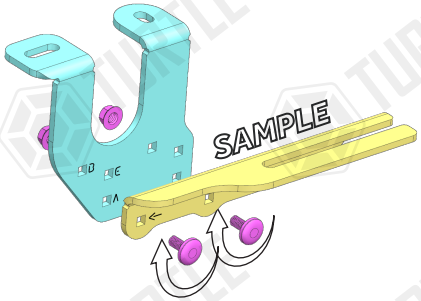

Whatever product type you will use, Example of side step types;
Type A (Alyans, Sapphire, Emerald)
Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

MB05141 / Rev.02 / 04.12.2023 (BASRİ)

CAN OTOMOTİV İNŞ. İTH. İHR. SAN. VE TİC. LTD. ŞTİ.
Veliköy OSB 4. Cadde No:20/A Çerkezköy/TEKIRDAĞ
www.canotomotiv.com.tr / turtlecancarry.com / turtlecancarry.eu / turtlecancarry.com.tr
+90 282 746 1320 *info@canotomotiv.com.tr*